



EN

**7-INCH AUDIO/VIDEO RECEIVER**  
**iLX-W670A**



OWNER'S MANUAL  
Please read before using this equipment.

# Contents

## Operating Instructions

### PRECAUTIONS

IMPORTANT INFORMATION .....	5
-----------------------------	---

### WARNING

Points to Observe for Safe Usage.....	5
<b>WARNING</b> .....	<b>5</b>
<b>CAUTION</b> .....	<b>6</b>
<b>NOTICE</b> .....	<b>7</b>

### Getting Started

Location of Controls .....	9
Turning Power On or Off.....	9
Turning the System On .....	9
Adjusting the Volume .....	9
Lowering Volume Quickly .....	9
Touch Screen Operation.....	10
About the HOME Screen .....	10
About the Indicator Display .....	11

### Radio

#### Radio Basic Operation

Listening to the Radio .....	12
Presetting Stations Manually .....	12
Presetting Stations Automatically .....	12
Mode switching Settings .....	12

### Apple CarPlay (Optional)

Access to Apple CarPlay.....	13
------------------------------	----

### Android Auto™ (Optional)

What is Android Auto .....	13
Activate Android Auto .....	13

### USB Flash drive (Optional)

Playback.....	15
Fast-forwarding/Fast-reversing (USB Audio/Video).....	15
Repeat Play (USB Audio/Video) .....	15
Shuffle Play (USB Audio/Video) .....	15
Searching for a Desired Song/Video/Photo.....	15
Slide Show (USB Photo).....	15
About USB List .....	15

### iPod mode on iPhone (Optional)

Playback.....	16
Searching for a Music File.....	17
Repeat Play.....	17
Shuffle Play.....	17

### Bluetooth® Operation

Setup Before Using.....	18
About Bluetooth .....	18
About the Hands-free Phone .....	18
Before Using Bluetooth.....	18

#### Hands-free Phone Control

Answering a Call .....	19
Hanging up the Telephone.....	19
Calling.....	19
Making a phone call using the Phone Menu .....	19
Siri .....	20
Phone Operation Screen .....	21
Adjusting the Speech Volume.....	21
Changing the Voice Output .....	21
DTMF (Touch-Tone) Function .....	21
Phone Book Function.....	21
Synchronizing the Phone Book .....	21

#### Bluetooth® Audio

Playback.....	22
Repeat Play.....	22
Shuffle Play.....	22



## AUX Operation (Optional)

AUX Operation .....	22
---------------------	----

## Camera Operation (Optional)

Camera Operation .....	23
Displaying the Camera Image from the Menu screen .....	23
Displaying the rear view video while the car is in reverse.....	23
About the Rear Camera Guide .....	23

## Sound Boost and Lighting link (Optional)

Lighting Link Setting Operation .....	24
Lighting Link settings Colors.....	25

## Setup

Setup Operation .....	26
-----------------------	----

### System Setup

Language Setup.....	27
Time Adjust Setup.....	27
Product Information.....	27
Software License.....	28
Connection Status .....	28
Steering Wheel Control.....	28
Reset.....	28

### Screen/Lighting Setup

Dimmer .....	29
Screen Color.....	29
Key Color .....	29

### Sound Setup

Setting the Fader/Balance.....	30
Adjusting the Bass/Middle/Treble.....	30
Adjusting the Parametric Equalizer Curve (EQ) .....	30
Setting an Equalizer .....	31
Setting the Subwoofer .....	32
Adjusting the Crossover Settings (X-Over) .....	32
Adjusting the Time Correction (TCR) .....	32
Setting the Speaker Level.....	33
Setting Defeat.....	33
About the Crossover .....	33

About Time Correction.....	34
Example 1. Listening Position: Front Left Seat .....	34
Example 2. Listening Position: All Seats .....	34

### Volume Setup

Volume Setup.....	35
-------------------	----

### Bluetooth Setup

Device List.....	35
Pairing the Bluetooth Device.....	35
Fast pairing the Bluetooth Device .....	35
Deleting a Bluetooth Device from the list.....	35
Searching for a Bluetooth Device .....	35
Displaying Bluetooth Information .....	36
Auto Connection .....	36
Downloading the Phonebook.....	36

### Rear Camera Setup

Parking Guide Adjust Setup.....	36
Video Setup .....	37

### Lighting Link ON/OFF

## Information

About the Supported Formats .....	39
About MP3/WMA/AAC/FLAC/WAV .....	39
About Audio Format .....	39
About Audio Format .....	39
About Photo Format .....	40
In Case of Difficulty .....	41
If this Message Appears .....	42
Specifications .....	43

---

# Installation and Connections

<b>WARNING .....</b>	<b>44</b>
<b>CAUTION .....</b>	<b>44</b>
<b>Precautions.....</b>	<b>44</b>
Accessory List .....	45
Installation .....	45
Caution concerning the installation	
location.....	45
Mounting the Microphone.....	45
Installation example using the Original	
Mounting Bracket .....	45
Connections.....	46
If an ACC power supply is not available.....	48
System Example.....	49

## LIMITED WARRANTY

---

---

# Operating Instructions

## PRECAUTIONS

---

### IMPORTANT INFORMATION

---

#### FCC COMPLIANCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide more reasonable protection against harmful interference in a residential installation, and are more stringent than "outdoor" requirements.

Operation is subjected to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an experienced radio/TV technician.

## WARNING

---

### Points to Observe for Safe Usage

---

- *Read this manual carefully before using this system components. They contain instructions on how to use this product in a safe and effective manner. Alpine cannot be responsible for problems resulting from failure to observe the instructions in this manual.*
- *This manual uses various pictorial displays to show you how to use this product safely and to alert you to potential dangers resulting from improper connections and operation. Following are the meanings of these pictorial displays. It is important to fully understand the meanings of these pictorial displays in order to use this manual and the system properly.*
- *This product may be used with software applications. Please follow all usage instructions and warnings when using this product at all times. Do not use this product or any software application in a manner which will hinder safe operation of your vehicle.*

### WARNING

- Operation of the system while driving is dangerous. Users should stop vehicle before operating the software.
- Road conditions and regulations take precedence over information contained on the map display: observe actual traffic restrictions and circumstances while driving.
- This software is designed for use exclusively in the unit. It cannot and may not be used in conjunction with other hardware.

### WARNING

**This symbol means important instructions. Failure to heed them can result in serious injury or death.**

---

#### **INSTALL THE PRODUCT CORRECTLY SO THAT THE DRIVER CANNOT WATCH TV/VIDEO UNLESS THE VEHICLE IS STOPPED AND THE PARKING BRAKE IS APPLIED.**

It is dangerous for the driver to watch TV/Video while driving a vehicle. Installing this product incorrectly enables the driver to watch TV/Video while driving. This may cause a distraction, preventing the driver from looking ahead, thus causing an accident. The driver or other people could be severely injured.

---

#### **DO NOT WATCH VIDEO WHILE DRIVING.**

Watching the video may distract the driver from looking ahead of the vehicle and cause an accident

---

#### **DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE.**

Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.

---

#### **KEEP THE VOLUME AT A LEVEL WHERE YOU CAN STILL HEAR OUTSIDE NOISES WHILE DRIVING.**

Excessive volume levels that obscure sounds such as emergency vehicle sirens or road warning signals (train crossings, etc.) can be dangerous and may result in an accident. LISTENING AT LOUD VOLUME LEVELS IN A CAR MAY ALSO CAUSE HEARING DAMAGE.

---

#### **MINIMIZE DISPLAY VIEWING WHILE DRIVING.**

Viewing the display may distract the driver from looking ahead of the vehicle and cause an accident.

---

#### **DO NOT DISASSEMBLE OR ALTER.**

Doing so may result in an accident, fire or electric shock.

---

#### **USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND.**

(Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

---

**KEEP SMALL OBJECTS SUCH AS SCREWS OUT OF THE REACH OF CHILDREN.**

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

---

**USE THE CORRECT AMPERE RATING WHEN REPLACING FUSES.**

Failure to do so may result in fire or electric shock.

---

**DO NOT BLOCK VENTS OR RADIATOR PANELS.**

Doing so may cause heat to build up inside and may result in fire.

---

**USE THIS PRODUCT FOR MOBILE 12V APPLICATIONS.**

Use for other than its designed application may result in fire, electric shock or other injury.

---

**MAKE THE CORRECT CONNECTIONS.**

Failure to make the proper connections may result in fire or product damage.

---

**BEFORE WIRING, DISCONNECT THE CABLE FROM THE NEGATIVE BATTERY TERMINAL.**

Failure to do so may result in electric shock or injury due to electrical shorts.

---

**DO NOT ALLOW CABLES TO BECOME ENTANGLED IN SURROUNDING OBJECTS.**

Arrange wiring and cables in compliance with the manual to prevent obstructions when driving. Cables or wiring that obstruct or hang up on places such as the steering wheel, gear lever, brake pedals, etc. can be extremely hazardous.

---

**DO NOT SPLICE INTO ELECTRICAL CABLES.**

Never cut away cable insulation to supply power to other equipment. Doing so will exceed the current carrying capacity of the wire and result in fire or electric shock.

---

**DO NOT DAMAGE PIPE OR WIRING WHEN DRILLING HOLES.**

When drilling holes in the chassis for installation, take precautions so as not to contact, damage or obstruct pipes, fuel lines, tanks or electrical wiring. Failure to take such precautions may result in fire.

---

**DO NOT USE BOLTS OR NUTS IN THE BRAKE OR STEERING SYSTEMS TO MAKE GROUND CONNECTIONS.**

Bolts or nuts used for the brake or steering systems (or any other safety-related system), or tanks should NEVER be used for installations or ground connections. Using such parts could disable control of the vehicle and cause fire etc.

---

**DO NOT INSTALL IN LOCATIONS WHICH MIGHT HINDER VEHICLE OPERATION, SUCH AS THE STEERING WHEEL OR GEARSHIFT.**

Doing so may obstruct forward vision or hamper movement etc. and results in serious accident.

---

 **CAUTION**

**This symbol means important instructions. Failure to heed them can result in injury or material property damage.**

---

**HALT USE IMMEDIATELY IF A PROBLEM APPEARS.**

Failure to do so may cause personal injury or damage to the product. Return it to your authorized Alpine dealer or the nearest Alpine Service Center for repairing.

---

**HAVE THE WIRING AND INSTALLATION DONE BY EXPERTS.**

The wiring and installation of this unit requires special technical skill and experience. To ensure safety, always contact the dealer where you purchased this product to have the work done.

---

**USE SPECIFIED ACCESSORY PARTS AND INSTALL THEM SECURELY.**

Be sure to use only the specified accessory parts. Use of other than designated parts may damage this unit internally or may not securely install the unit in place. This may cause parts to become loose resulting in hazards or product failure.

---

**ARRANGE THE WIRING SO IT IS NOT CRIMPED OR PINCHED BY A SHARP METAL EDGE.**

Route the cables and wiring away from moving parts (like the seat rails) or sharp or pointed edges. This will prevent crimping and damage to the wiring. If wiring passes through a hole in metal, use a rubber grommet to prevent the wire's insulation from being cut by the metal edge of the hole.

---

**DO NOT INSTALL IN LOCATIONS WITH HIGH MOISTURE OR DUST.**

Avoid installing the unit in locations with high incidence of moisture or dust. Moisture or dust that penetrates into this unit may result in product failure.

## NOTICE

### Product Cleaning

Use a soft dry cloth for periodic cleaning of the product. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

### Temperature

Be sure the temperature inside the vehicle is between +45°C (+113°F) and 0°C (+32°F) before turning your unit on.

### Maintenance

If you have problems, do not attempt to repair the unit yourself. Return it to your Alpine dealer or the nearest Alpine Service Station for servicing.

### Protecting the USB connector

- Only an iPhone or USB flash drive can be connected to the USB connector on this unit. Correct performance using other USB products cannot be guaranteed.
- If the USB connector is used, be sure to use only the supplied connector cable with the unit. A USB hub is not supported.
- Depending on the connected USB flash drive, the unit may not function or some functions may not be performed.
- The audio file format that can be played on the unit is MP3/WMA/WAVE/AAC/FLAC/Ogg/APE.
- Artist/song name, etc., can be displayed. Certain, special characters may not be correctly displayed.

## CAUTION

*Alpine accepts no responsibility for lost data, etc., even if data, etc., is lost while using this product.*

### On Handling USB Flash drive


- This unit can control a memory storage device that supports the USB Mass Storage Class (MSC) protocol. Playable audio file formats are MP3, WMA, AAC, WAVE, APE, OGG and FLAC.
- USB Flash drive function is not guaranteed. Use a USB flash drive according to the terms of agreement. Read the USB flash drive Owner's Manual thoroughly.
- Avoid usage or storage in the following locations:
  - Anywhere in the car exposed to direct sunlight or high temperatures.
  - Anywhere the possibility of high humidity or corrosive substances are present.
- Fix the USB flash drive in a location where driver operation will not be hindered.
- USB Flash drive may not function correctly at high or low temperature.
- Use only certified USB flash drive. Note that even certified USB flash drive, may not function correctly depending on its type or state.
- Depending on the settings of the USB flash drive type, memory state or encoding software, the unit may not play back or display properly.
- USB Flash drive may take time to start playback. If there is a particular file other than audio in the USB flash drive, it may take considerable time before the file is played back or searched.
- The unit can play back "mp2", "mpa", "mp3", "m4a", "wma", "m4a", "flac"/"fla", "wav", "ogg", "ape" file extensions.
- Do not add the above extensions to a file other than audio data. This non-audio data will not be recognized. The resulting playback may contain noise that can damage speakers and/or amplifiers.
- It is recommended to back up important data on a personal computer.
- Do not remove the USB device while playback is in progress. Change SOURCE to something other than USB, then remove the USB device to prevent possible damage to its memory.

- *Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.*
- *Apple, iPhone, iPod, iPod nano, iPod touch, iPad, Lightning and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay is a trademark of Apple Inc.*
- *Use of the Made for Apple and Works with Apple badges means that an accessory has been designed to connect specifically to the Apple product(s) identified in the Made for Apple badge and to work specifically with the technology identified in the Works with Apple badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.*
- *Please note that the use of this accessory with an Apple product may affect wireless performance.*
- *Use of the Apple CarPlay logo means that a vehicle user interface meets Apple performance standards. Apple is not responsible for the operation of this vehicle or its compliance with safety and regulatory standards. Please note that the use of this product with iPhone may affect wireless performance.*
- *Google, Android, Google Play and Android Auto are trademarks of Google LLC. To use Android Auto on your car display, you'll need an Android Auto compatible vehicle or aftermarket stereo, an Android phone running Android 6.0 or higher, and the Android Auto app.*
- *The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Alpine Electronics, Inc. is under license.*
- *MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson. Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i.e. revenue-generation) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required. For details, please visit <http://www.mp3licensing.com>*

# Getting Started

## Location of Controls

When system is powered off, Short/long touch any button to turn the power on.

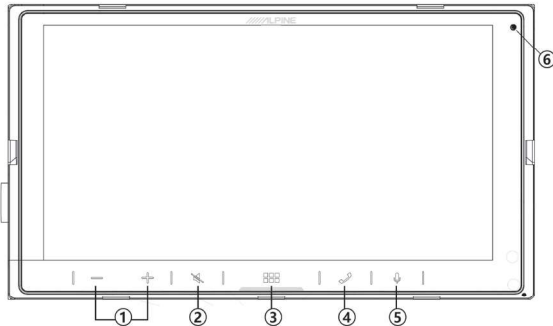

- ① **- / + (DOWN/UP) button**  
Touch to adjust the volume.  
Touch and hold this button for at least 1.7 second to adjust the volume to maximum or minimum
- ② **(MUTE) button**
  - Touch to activate/deactivate the mute mode.
  - Touch and hold this button for at least 1.7 second to display on/off
- ③ **(HOME)/(Power Off) button**  
Activates the HOME screen.  
Touch and hold this button for at least 1.7 second to turn the power off.
- ④ **(Phone) button**  
Activates the Phone screen.
- ⑤ **(Siri) button**
  - When phone is connected to CarPlay, touch this button to activate Siri
  - When phone is connected to Android Auto, touch this button to activate VR
  - When Siri is activated, the function of Siri is available
  - When VR is activated, the VR setting is ON and the function of VR is available
  - When the CarPlay/Android Audio is disconnected, the operation in this button is invalidate
  - When CarPlay/Android Audio is disconnected, touch and long hold to enter into the Device Searching List to activate the new device searching
- ⑤ **(Reset) button**  
Reset & Restart.

### About the button descriptions used in this Owner's Manual

The buttons found on the face of the unit are expressed in bold (e.g. **(HOME)**). The buttons found on the touch-screen display are shown in bold within brackets, [ ] (e.g. [**X**]).

## Turning Power On or Off


Some of this unit's functions cannot be performed while the vehicle is in motion. Be sure to stop your vehicle in a safe location and apply the parking brake, before attempting these operations.

- 1 **Turn the ignition key to the ACC or ON position.**  
The system turns on.
  - When turned on, the system displays the last screen that was displayed before the ignition key was turned off. For example, if the unit is in radio mode when ignition is turned off, it will remain in radio mode when ignition is turned back on.
- 2 **Touch and hold the (HOME)/(Power Off) button for at least 1.7 second to turn the power off.**
  - When the system is used for the first time, the language selection menu is displayed. Select the desired language, and then touch [OK].
  - The unit can be turned on by touching the [**(HOME)**] (HOME) button, [**-**] button [**+**] button [**(Siri)**] button or [**(Phone)**] (Phone) button.
  - The unit is a precision device. Careful handling of the unit should provide you with years of trouble-free operation.

## Turning the System On

When the system is used for the first time, the language selection menu is displayed.

Select a language, and then touch [OK].

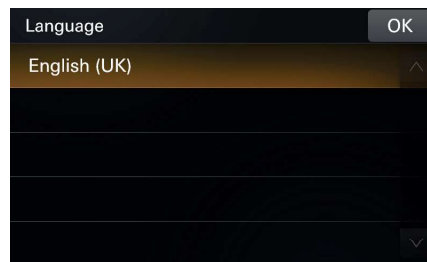

- Some of this unit's functions cannot be performed while the vehicle is in motion. Be sure to stop your vehicle in a safe location and apply the parking brake before attempting these operations.

## Adjusting the Volume

### Adjust the volume by touching - / +

Volume decreases increases continuously by touching and holding

- / +

Volume: 0 - 35

## Lowering Volume Quickly

Audio Mute function instantly lowers the volume level to 0.

- 1 **Touch the (MUTE) button to activate the MUTE mode.**  
The audio level will be 0.
- 2 **Touching the (MUTE) button again will bring the audio back to its previous level.**




## Touch Screen Operation

You can operate the system by using the touch panel on the screen.

- Be sure to touch the onscreen button lightly with the pad of your finger to avoid scratching the display.

**Touch a button or list item on the screen lightly.**

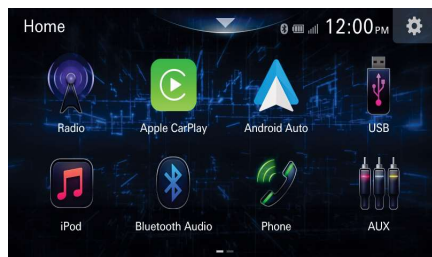

Radio	Displays the Radio main screen (page 12).
Apple CarPlay	You can use Apple CarPlay (page 13).
Android Auto	You can use Android Auto (page 13).
USB	You can play back music files, video files and photo files stored in a USB flash drive (page 14). <ul style="list-style-type: none"> <li>• If a USB flash drive is not connected, this widget is not available.</li> </ul>
iPod	Displays the iPod main screen (page 16) <ul style="list-style-type: none"> <li>• If an iPhone is not connected, this widget is not available.</li> </ul>
Bluetooth Audio	Displays the Bluetooth Audio main screen (page 21).
Phone	Displays the Phone main screen (page 18).
AUX	Displays the AUX main screen (page 22).
Camera	Displays the Camera main screen (page 23).


## About the HOME Screen

In the HOME screen, you can select the audio source and perform various setups or operations on the unit.


**Touch the  (HOME) button.**

The HOME screen is displayed.

### ■ HOME screen example (Page1)

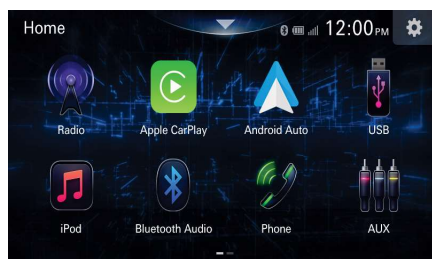

### ■ HOME screen example (Page2)

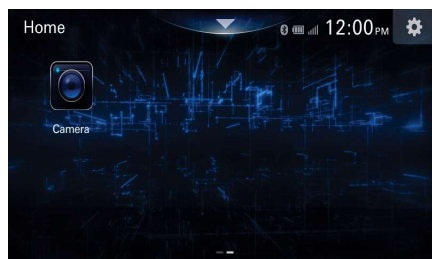



## About the Indicator Display

The Indicator Bar at the top of the screen displays various types of information, like the current time.



- ① Sound Boost.  
You can turn the Sound Boost (page 24).
- ② Lights up when connected to a Bluetooth compatible device.
  - Sets ash when Bluetooth disconnected
- ③ Indicates the battery level of the connected Bluetooth device.

Battery Level	Level 3	Level 2	Level 1	No Battery
Icon				

This may not be displayed depending on the connected Bluetooth device.


- ④ Indicates the signal strength level of the connected Bluetooth compatible device.  
Displayed when Bluetooth setting is ON.

0	1	2	3	4	5

- ⑤ Indicates the current time.  
You can switch between the 12 hour display and 24 hour display options (page 27).
- ⑥ Indicates the volume on/off status.
- ⑦ Setup  
Click to enter the Settings

# Radio

## Radio main screen example

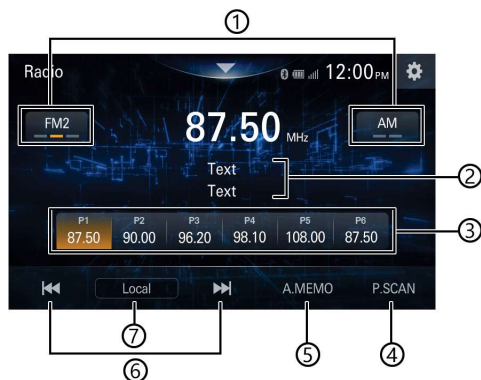

- ① Band button  
Switches a band.
- ② Information display
- ③ Preset button  
Displays the preset stations with a short touch.  
Touch for at least 1.5 second to memorise the current station as a preset station.
- ④ Plays each preset station for about 10 seconds.
- ⑤ Scan and memorises active stations automatically
- ⑥ Touch [▶▶], [◀◀] to select the station seek up or seek down respectively  
Touch [◀] [▶] to change the radio frequency up or down respectively.  
Operate in manual mode
- ⑦ Switch Local mode/Manual mode/DX mode

### Seek up [▶▶]

**Seek up:** From the current station ,seek forward according to the specified step unit ,  
After selecting a active station, then play If no active station, will keep searching

### Seek down [◀◀]

**Seek down:** From the current station ,seek down according to the specified step unit ,  
After selecting a active station, then play If no active station, will keep searching

## Radio Basic Operation

### Listening to the Radio

- 1 Touch the [HOME] button and select radio mode.  
The display shows the radio mode screen.
- 2 Select the desired band from [FM1] / [FM2] / [FM3] / [AM1]/[AM2].
- 3 Touch [▶▶], [◀◀] [◀], [▶] to adjust the radio frequency.

### Presetting Stations Manually

- 1 Tune in a desired radio station you wish to store in the preset memory by manual or automatic seek tuning.
  - 2 Touch and hold the Preset number you want to store for at least 1.5 second.  
The selected station is stored.
  - 3 Repeat the procedure to store up to 5 other stations onto the same band.  
To use this procedure for other bands, simply select the desired band and repeat the procedure.  
  
A total of 30 stations can be stored in the preset memory (6 stations for each band; FM1, FM2, FM3, orAM1,AM2).
- If a preset memory has already been set in the same preset number, it will be cleared and the new station will be memorized.

### Presetting Stations Automatically

From the start Frequency ,scan upon the step unit (+1) and store the validated station ,After one cycle, store the station from low frequency to high frequency

#### Touch [ A.MEMO] go to Scan for stations and store valid stations

- If a valid station is scanned, it is not required to play, the screen display "scanning" during the scanning process and will automatically switch to the first stored station on FM1

### Mode switching Settings

#### Setting item:

Manual/DX(Initial setting)/Local

#### Setting contents:

Manual mode:manually scanning station

**DX mode:** When select the DX mode and start to search ,it will be performed until the next or previous valid station, if no valid station is searched, the search continues

**Local mode:** When select the local mode and start to search ,it will be performed until the next or previous valid station, if no valid station is searched, the search continues

- :By default, Dx mode is used. The Local mode stop sensitivity is increased by 30db over Dx under AM and FM

# Apple CarPlay (Optional)

Apple CarPlay is a smarter, safer way to use your iPhone in the car. Apple CarPlay takes the things you want to do with your iPhone while driving and puts them right on the unit. You can get directions, make calls, send and receive messages, and listen to music, all in a way that allows you to stay focused on the road. Just plug in your iPhone to the unit and go.

- Before using this function, plug in your iPhone using Lightning to USB Cable (Supplied with iPhone) to the unit.
- Some functions may not be available while driving.
- About iPhone models usable with this unit, see “iPod mode on iPhone (Optional)” (page 16). Only an iPhone 6 or later compatible with Apple CarPlay function.


## Access to Apple CarPlay

### 1 Touch the (HOME) button.

The HOME screen is displayed.

### 2 Touch [Apple CarPlay].

The Apple CarPlay screen is displayed.

Touch the desired App icon on the unit, or use Siri function by touching the  button.

- When a used iPhone 6 or later is reconnected, touch the pop-up message-“Apple CarPlay connected.” within 5 seconds to access to Apple CarPlay screen.
- The App must be Apple CarPlay compatible in order to appear in the Home screen.

# Android Auto™ (Optional)

## What is Android Auto

Android Auto is designed to make it easier to use apps from your phone while you're on the road. Navigate with Google Maps, listen to playlists or podcasts from your favorite apps, and more.

## Activate Android Auto

Download the Android Auto App from the Google Play store before continuing.

Just plug in your smartphone to the unit's USB connector, then follow the prompt to pair your smartphone with the unit.

- The connected smartphone with Android Auto will disconnect other phone's Bluetooth connection and pair to the unit.

### 1 Touch the (HOME) button.

The HOME screen is displayed.

### 2 Touch [Android Auto].

The Android Auto screen is displayed.

- You can make a call, use voice recognition function and Android Auto's compatible navigation app, etc.,.
- Only Google approved apps with necessary driver-safety measures in place can be used.

# USB Flash drive (Optional)

You can play back music files (WAVE,WMA,AAC,MP3,OGG,FLAC, APE), video files (AVI,MPEG 1/2,MPEG4,WMV,Flash,QuickTime,ASF, Matroska Video,TS Stream,3GP) and photo files (JPG,JPEG,PNG,BMP) stored in a USB flash drive on the internal player of this system.

## ⚠ WARNING

**It is dangerous for the driver to watch video while driving the vehicle. The driver may be distracted from looking ahead and an accident could occur.**


**Install the unit correctly so that the driver cannot watch a video unless the car is stopped and the parking brake is applied.**

**If the unit is not installed correctly, the driver will be able to watch a video while driving and may be distracted from looking ahead and cause an accident. The driver or other people could be severely injured.**


### ■ USB Audio mode screen



### ■ USB Video mode screen

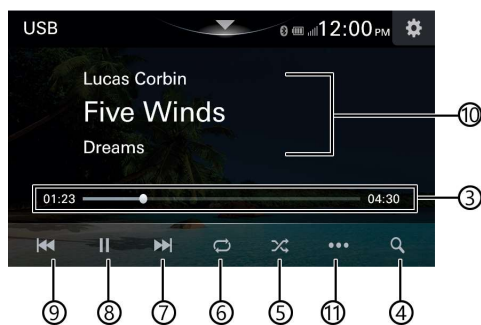

### ■ USB Photo mode screen

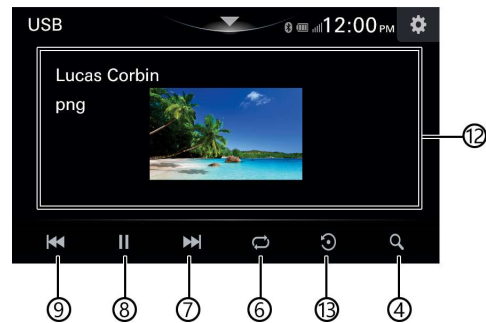

- ① Artwork display
- ② Information display
- ③ Elapsed time/Total time for playing
- ④ Displays the USB List screen
- ⑤ Shuffle mode
- ⑥ [🔄] repeat\_off, [📁] repeat\_folder, [🔁] repeat\_one, [🔁] repeat\_all,
- ⑦ Finds the beginning of next chapter//Fast-forwards when touched for at least 2 second
- ⑧ Pause and Play
- ⑨ Finds the beginning of the current file/Finds a previous file within 1 second after playback starts/Fast-reverses when touched for at least 2 second
- ⑩ Video information display
- ⑪ Video Setup display
- ⑫ Photo information display
- ⑬ Rotate mode

• For your safety, video is not displayed and only audio can be heard while driving.

---

## Playback


---


**1 Touch the  (HOME) button and select USB mode.**  
The display shows the USB mode screen.

**2 Touch [ Q ] (Search).**

**3 Select the desired mode.**

 : USB Audio mode

 : USB Video mode

 
 : USB Photo mode

**4 Touch [  ] or [  ] to select the desired track(file).**


**Returning to the beginning of the previous track (file):**

Touch [  ].


**Fast reverse the current track :**

Touch and hold 2s [  ].


**Advancing to the beginning of the next track (file) :**

Touch [  ].

**Fast forward the current track :**

Touch and hold 2s [  ].

**3 To pause playback, touch [  ].**

Touching [  ] again will resume playback.

- The playback time may not be correctly displayed when a VBR (Variable Bit Rate) recorded file is played back.
- If there is tag information, artist name/album name/track name is displayed.
- If there is no label information, no name is displayed.
- ID3 tag/WMA tag

If an MP3/WMA/AAC/FLAC/WAVE/Ogg/APE file contains ID3 tag/WMA tag information, the ID3 tag/WMA tag information is displayed. (e.g., song name, artist name, and album name)



---

## Fast-forwarding/Fast-reversing (USB Audio/Video)

---

**During playback, touch and hold [  ] (Fast-reverse) or touch and hold [  ] (Fast-forward).**

Touch and hold for more than 2 second to fast-forward/fast-reverse.

 
- **Fast-reverse Speed:**  
touch [  ] to change the speed, x4 → x10 → x32 → off
- **Fast-forward Speed:**  
touch [  ] to change the speed, x4 → x10 → x32 → off

---


## Repeat Play (USB Audio/Video)


---

**1 Touch [  ].**


- The [  ] button displays the currently selected mode.

**2 Select your desired Repeat mode.**

ALL : All files are repeatedly played back.

One : Only the file currently playing is repeatedly played back.

Folder : Only files in a folder are repeatedly played back.

OFF : Repeat mode is Off.

---

## Shuffle Play (USB Audio/Video)

---

**1 Touch [  ].**

- The [  ] button displays the currently selected mode.

**2 Shuffle mode is only valid in [  ] [  ] [  ].**

**3 When in [  ] touch [  ], automatically switch [  ].**

---


## Searching for a Desired Song/Video/Photo


---

**1 Touch [ Q ] (Search).**

**2 Select the desired mode.**

 : USB Audio mode

 : USB Video mode

 : USB Photo mode

**3 Touch [  ] or [  ] to select the folder.**

**4 Touch your desired File name.**

When you select a Folder name, repeat the same procedure to select another Folder name or File name.


---

## Slide Show (USB Photo)

---

The Slide Show shows photos that change every 5 seconds.

**To pause playback, touch [  ].**

Touching [  ] again will resume playback.

---

## About USB List

---

You can select the desired mode

- Each page displays up to 5 files . if you want to view more than 5 files, swipe down or touch alphabet to search

### About order

**Display and sort according to the head character**

Display in the order of 1 -> 2 -> 3 below.

0: Folder :When there are folders ,the folders are displayed ahead of the files

1: Number ( represented by "#" on the Right Search Bar )

2: English Alphabet

3: Shorting order of Unicode

**Right Search Bar (order of list )**

1: Number ( represented by "#" on the Right Search Bar )

2: English Alphabet

- Search only the files with numeric or English alphabetic headers

# iPod mode on iPhone (Optional)


Before using this function, plug in your iPhone using a Lightning-USB cable (supplied with iPhone) to the unit,

- This unit does not support video playback from iPhone which connected to this unit via USB Connector.
- Internet or telephone function, etc., of the iPhone is not controllable from the unit, but these functions can be controlled using the iPhone itself.

## About iPhone models usable with this unit

- The following devices have been tested and shown to work with this unit. Correct function of earlier versions cannot be guaranteed.  
iPhone 11, iPhone 11 Pro, iPhone 11 Pro Max, iPhone SE 2, iPhone 12 mini, iPhone 12, iPhone 12 Pro, iPhone 12 Pro Max, iPhone 13 mini, iPhone 13, iPhone 13 Pro, iPhone 13 Pro Max, iPhone SE 3, iPhone 14, iPhone 14 Plus, iPhone 14 Pro, iPhone 14 Pro Max, iPhone XS, iPhone XS Max, iPhone XR, iPhone X, iPhone 8, iPhone 8 Plus, iPhone 7, iPhone 7 Plus, iPhone SE, iPhone 6s, iPhone 6s Plus, iPhone 6, iPhone 6 Plus,

## ■ iPod main screen example

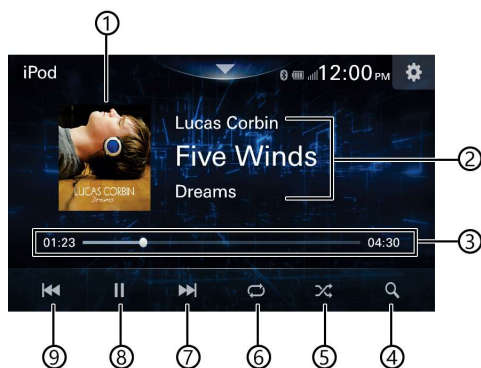

- ① Artwork display
- ② Information display\*
- ③ Elapsed time/Total time for playing Repeat mode
- ④ Displays the iPod List screen
- ⑤ Shuffle mode
- ⑥ [🔄]repeat\_off, [🔁]repeat\_one, [🔁]repeat\_all,
- ⑦ Finds the beginning of next chapter/Fast-forwards  
When touched for at least 2 second
- ⑧ Pause and Play
- ⑨ Finds the beginning of the current file/Finds a previous file within 1 second after playback starts/Fast-reverses when touched for at least 2 second

\* Podcast mode.

## Playback

**1** Touch the **⏪** (HOME) button and select iPod mode.  
The display shows the iPod mode screen.

**2** Touch [⏮] or [⏭] or to select the desired track (file).

**Returning to the beginning of the previous track (file):**

Touch [⏮].

**Fast reverse the current track :**

Touch and hold 2s [⏮].

**Advancing to the beginning of the next track (file) :**

Touch [⏭].

**Fast forward the current track :**

Touch and hold 2s [⏭].

**3** To pause playback, touch [⏸].

Touching [▶] again will resume playback.

- If a song is playing on the iPhone before it is connected to the unit, it will continue playing when it is connected.
- An episode may have several chapters. The chapter can be changed by touching [⏮] or [⏭].
- If the artist, album or song name, created in iTunes, has too many characters, songs may not be played back when connected to the unit. Therefore, a maximum of 255 characters is recommended. The maximum number of characters for the unit is 255.
- Some characters may not be correctly displayed.


## Searching for a Music File

<Music Search Menu>

Hierarchy 1	Hierarchy 2	Hierarchy 3	Hierarchy 4
Radio	—	—	—
Playlists	Songs	—	—
Artists	Albums	Songs	—
Albums	Songs	—	—
Songs	—	—	—
Genres	Artists	Albums	Songs
Composers	Albums	Songs	—
Podcast	Episodes	—	—
Audiobook	—	—	—

### For example: Searching by Artist name

The following example explains how an Artists search is performed.

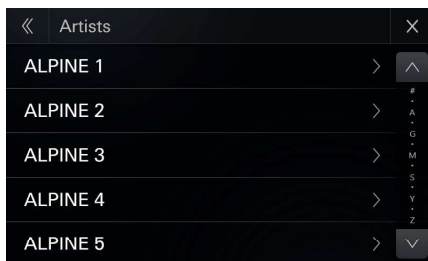

**1 Touch [ Q ] (Search) during playback.**

**2 Touch [Artists].**

The Artists search screen is displayed.

**3 Select the desired artist.**

**4 Touch the desired album's name.**

All songs of the selected album are displayed

**5 Touch the desired song's name.**

The selected song is played back.


- If you touch [ << ], the category browsing mode screen is displayed.


## Repeat Play


**1 Touch [ ].**

- The [ ] button displays the currently selected mode.

**2 Select your desired Repeat mode.**

ALL : All files are repeatedly played back.

One : Only the file currently playing is repeatedly played back.

OFF : Repeat mode is Off.

## Shuffle Play

**1 Touch [ ].**

- The [ ] button displays the currently selected mode.

**2 Shuffle mode is only valid in  [  ] [  ].**

**3 When in  touch [ ], automatically switch .**



# Bluetooth® Operation

## Setup Before Using

### About Bluetooth

Bluetooth is a wireless technology allowing communication between a mobile device or personal computer over short distances. This enables a hands-free call or data transmission between Bluetooth compatible devices. Bluetooth transmission is available in the unlicensed 2.4 GHz spectrum if the distance between devices is within 10 meters. For details, refer to the Bluetooth website (<http://www.bluetooth.com/>).

- Depending on the Bluetooth version, a Bluetooth compatible device may not be able to communicate with this unit.
- Proper function of this unit with all Bluetooth compatible devices is not guaranteed. For handling of the Bluetooth compatible device, consult your Alpine dealer or Alpine website.
- Depending on the surroundings, Bluetooth wireless connection may be unstable.
- When you place a call, or perform setup operations, be sure to stop your car in a safe place.
- Depending on the connected Bluetooth compatible device(s), the function may differ. Also refer to the Owner's Manual of the connected device(s).

### About the Hands-free Phone

Hands-free calls are possible when using a HFP (Hands-Free Profile) compatible mobile phone with this unit.

- Avoid performing a hands-free call in heavy traffic or on narrow or winding streets.
- Close the windows while calling to reduce background noise.
- If both calling parties are using hands-free devices, or the call is made in a noisy location, difficulty hearing the other person's voice is normal.
- Depending on telephone line conditions or certain mobile devices used, voices may sound unnatural.
- When using a microphone, speak as directly as you can into the microphone to obtain the best sound quality.
- Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in the Owner's Manual are based upon the latest available information and are believed to be accurate at the time of printing. Alpine reserves the right to change or modify any information or specifications without notice or obligation.

## Before Using Bluetooth


Before using the hands-free phone/audio function, the following settings need to be made.

### Register a Bluetooth device in this unit.

- See "Bluetooth Setup" (page 35).
- You can search for this unit using a Bluetooth compatible device, and then connect that Bluetooth compatible device to this unit. The device name of this unit is "iLX-W670A" and the initial number of the passcode is "0000." Also refer to the Owner's Manual of the connected device(s).


## Hands-free Phone Control

Touch **[Bluetooth]** in the HOME screen to display the Bluetooth menu screen.

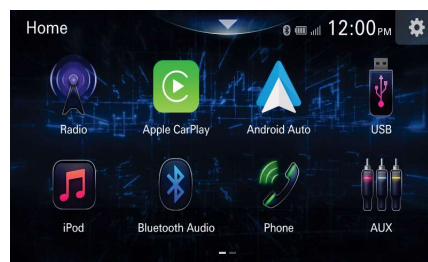

[Phone] button

### Phone menu screen example

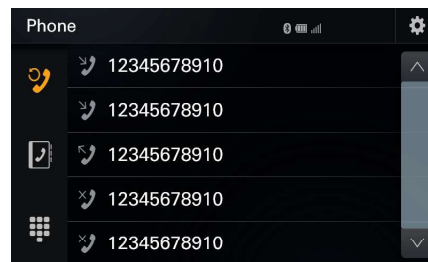

#### Recent Events list

You can display up to 100 items, such as phone numbers of the most recent incoming calls, missed calls and outgoing calls, and contact names that are registered in the Phone Book. When 100 items exist in the list, the oldest item is deleted when a further item is to be added.

#### Contacts list

You can make a phone call from the Phone Book, or edit the Phone book.

#### Keypad screen

Use to type a phone number.



## Answering a Call

- 1 An incoming call triggers the ringtone and an incoming call display.

### Phone Incoming screen example



- 2 Touch [Call] (Call). The call starts.



- 1 Touch [Keypad] Display Keypad screen
- 2 Touch switch Car speaker [Speaker icon] Or Phone speaker [Phone icon]
- 3 Touch switch mute on/off
- 4 Adjust the volume level

- During a call, the audio for the current mode on the unit is muted. After calling, playback will resume.
- When the caller's number is transmitted to the system, if the caller's name is stored in the phone book, the name is displayed. If the name is not stored, the number is displayed.
- Touch [Decline] to reject an incoming call.

## Hanging up the Telephone


- 1 Touch [End Call]. The call finishes.

## Calling

### Making a phone call using the Phone Menu

#### Entering a Phone Number to Make a Call

- 1 Touch [Keypad]. The number input screen (Keypad) appears.

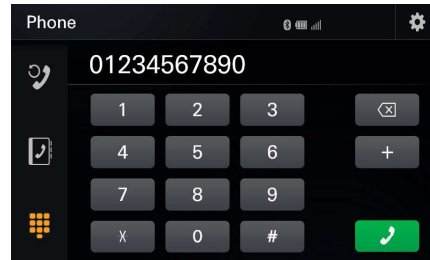

Touch [X] to delete an entered number.


- 2 Enter the phone number you wish to call.
  - You can enter up to 20 digits.

- 3 Touch [Call] (Call). The phone call is started.

- To change the Bluetooth device, see "Bluetooth Setup" (page 35).


#### Making a phone call from the Recent Events list

- 1 Touch [Recent Events] to change to the Recent Events list screen.

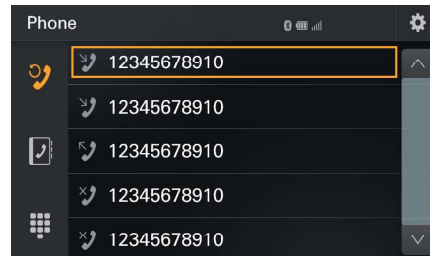

- 2 Touch the name of the contact or number you want to call. The phone call is started.


#### Calling from the Contacts list (Phone Book)

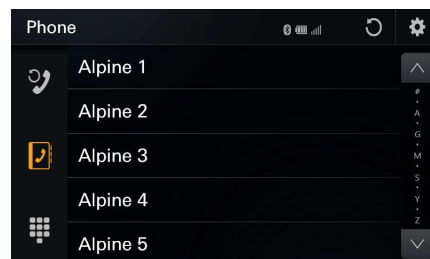

- 1 Touch [Contacts] to change to the Contacts list screen.
- 2 Touch the name of the contact or number you want to call.

### 3 Touch the phone number.

The Phone Operation screen is displayed.

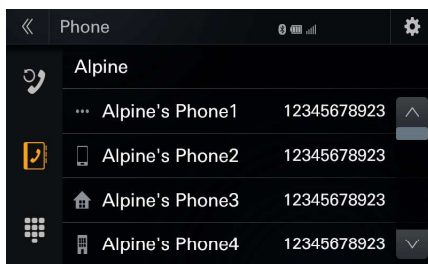

### 4 Touch the number you want to call.

The phone call is started

---

## Siri

---

Establish iPhone Bluetooth connection and wake up Siri from phone , below interface will pop up and the voice output is from the unit.



## Phone Operation Screen



### Adjusting the Speech Volume

You can adjust Mic. Level (Microphone Level).  
Level 1: Level 2: Level 3:

### Changing the Voice Output

The voice output for calls is switchable between car speakers and the mobile phone speaker.

Touch [ ] or [ ].

### DTMF (Touch-Tone) Function

Transmits a DTMF (Touch-Tone) during a call.


**1** Touch [ ] (Keypad).  
The number input screen (Keypad) appears.

**2** Input number.

- You can transmit a Touch-Tone signal during a call.

## Phone Book Function

### Phone Book screen example

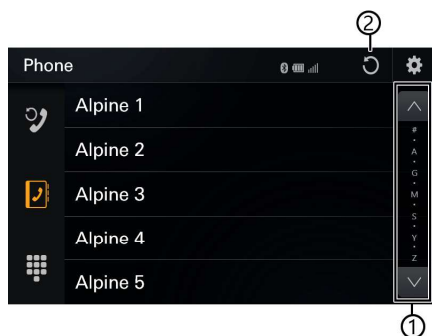

- Use to narrow down your search for names, etc.
- You can synchronize the system's phone book with the mobile phone's phone book.

## Synchronizing the Phone Book

Touch [ ].

Synchronization of the phone books starts.

- You can store up to 1,000 registered name in the phone book.
- You can store up to 5 phone numbers by one person's name.

## Bluetooth® Audio

If a Bluetooth compatible mobile phone, portable player, etc. is connected by wireless, you can play back a song (operation is controllable from the unit).

- Operation may vary, depending on the Bluetooth compatible device

### Bluetooth Audio main screen example



- Default image display
- Information display
- Elapsed time/Total time for playing
- Search device
- Shuffle mode
- [ ]repeat\_off,[ ]repeat\_folder,[ ]repeat\_one, [ ]repeat\_all
- Finds the beginning of next chapter
- Pause and Play
- Finds the previous file

- Song title/Artist title/Album title/Elapsed time do not display for AVRCP Ver. 1.0.
- To play back audio, a mobile phone or a portable player conforming to A2DP (Advanced Audio Distribution Profile) or AVRCP (Audio/Video Remote Control Profile) is required.  
Not all functions work with all devices.
- During a call, sound on the Bluetooth audio source is paused.

**Compatible AVRCP versions: 1.0, 1.3, 1.4, 1.5, 1.6.2**

- Available functions may differ depending on the AVRCP version.

---

## Playback


---

- 1 Touch the  (HOME) button and select **Bluetooth Audio mode**.

The display shows the Bluetooth Audio mode screen.

- 2 Touch [  ] or [  ] to select the desired track (file).

Returns the beginning of the previous file:

Touch [  ].

Advance to the beginning of the next file:

Touch [  ].



- 3 To pause playback, touch [  ].

---

## Repeat Play


---


Available for AVRCP Ver. 1.0, 1.3, 1.4, 1.5, 1.6.2.


- 1 Touch [  ].
  - [  ] displays the currently selected mode.

- 2 Select your desired Repeat mode.

The selected Repeat mode changes the button.

ALL : Once all of the songs have finished playing, play back is repeated, starting with the first song.

One : Only the track currently playing is repeatedly played back.

OFF : Repeat mode is Off.

- Operations may differ depending on the connected Bluetooth compatible device.

---

## Shuffle Play

---

Available for AVRCP Ver. 1.0, 1.3, 1.4, 1.5, 1.6.2.

Touch [  ].

- All songs in the Bluetooth compatible devices are played back in random sequence. Any one song does not play back again until all songs have been played back.
- Operations may differ depending on the connected Bluetooth compatible device.

# AUX Operation (Optional)

---

## AUX Operation

---

- Through AUX connection, you can display the videos or images output from other devices
- For safety, video image can not be displayed when vehicle is moving. To view the video image, please stop in a safe zone and apply the parking brake.
- A mini AV cable is required to make the connection (sold separately) Further details are given in <<Installation Manual>>

### AUX screen example



- 1 Touch [  ].
- 2 Touch [AUX] Display AUX screen

# Camera Operation (Optional)

## Camera screen example



### Setting item:

Display Reverse video

### Setting contents:

Camera Guide Off (Initial setting) / On

- No impacts on other modes (except video, video shall be suspended, When playing the audio, the audio shall continue playing), Switch to this screen, other modes to run in the background

## Camera Operation

### Displaying the Camera Image from the Menu screen

- 1 Touch the  (HOME) button.  
The HOME screen is displayed

- 2 Touch [Camera].

- Touch the screen while the camera image is being displayed, and touch [X] to return to the main source screen or previous screen.
- You can perform a Guide Adjustment for the rear view image. For details, see "Rear Camera Setup" (page 36).

### Displaying the rear view video while the car is in reverse

- 1 Shift the gear lever to the reverse (R) position.  
The rear view image is displayed while the car remains in reverse.


- 2 If you shift the gear lever to a position other than reverse (R), the monitor returns to the previous screen.

- Never depend solely on the camera when backing up. Always turn and look and only use the camera for additional assistance.
- This function is effective when the reverse wire is properly connected.
- You can perform a Guide Adjustment for the rear view image. For details, see "Rear Camera Setup" (page 36).

## About the Rear Camera Guide

### ■ Indication mark meaning

When the car is put into reverse gear, the monitor switches to the rear view camera image. Guides appear to help visualize the car's width and distance from the rear bumper.

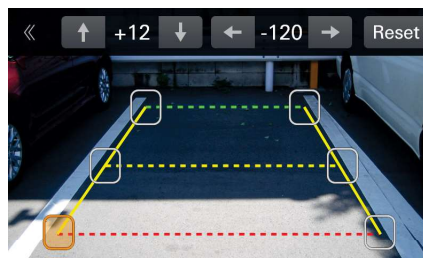

### Car width extension marks (red, yellow and green in order of distance)

If properly calibrated, the marks indicate the car's width. This helps guide the car's path when backing up in a straight line.

The marks represent the distance from the rear of the car (from the rear end of the bumper).

- The marks do not move in synchronization with the steering wheel.
- Set the marks to suit the car's width.
- Depending on the condition of the car or road surface, the range of vision may vary.
- The camera has a limited range of vision. Objects at extreme angles to the camera (e.g. under the bumper or at opposite ends of the bumper) may not be in its field-of-vision.
- The rear camera image may have a tint which is different from the actual surroundings.
- Depending on the car, the guidance may deviate to the right or left. This is not a malfunction.

# Sound Boost and Lighting link (Optional)



- ① Current screen On/Off
  - ② Sub.Woofer On/Off  
Linkage with the Settings in sound (page 32)
  - ③ Adjust Sub.Woofer Level  
Linkage with the Settings in sound (page 32)
  - ④ Sub.Woofer Phase  
Linkage with the Settings in sound (page 32)  
0° (Initial setting), 180°
  - ⑤ Lighting Link setting  
can change the LED color of the system model, the keyColor of this unit, and the background color in tandem.
  - ⑥ Displays sound setup icon  
touch the icon to sound setup screen
  - ⑦ Max Mid Bass On/Off  
Linkage with the Settings in sound (page 31)
  - ⑧ Max Bass On/Off  
Linkage with the Settings in sound (page 31)
- If Lightinglink is OFF in the settings, this icon will not be displayed (page 37).

## Lighting Link Setting Operation

When operating the Lighting color of the system model with Lightinglink, it is necessary to connect a model that supports Lightinglink. Check the Alpine website for compatible models.

- 1 Touch [ ].
- 2 Touch [ ] Display Sound Boost screen
- 3 Touch [ ] Display Lighting Link screen

## Lighting Link screen example



- ① LED On/Off  
LED OFF: Premium Direct Color and LED Brightness and LED Lighting Speed, Other Color is grayed out and cannot be selected. And the Lighting of the connected system turns off.
- ② Select Premium Direct Color  
Blue,Red,Amber,Green,White  
Each Lighting color changes in conjunction. Please refer to page 25 for the changed parts and their colors.
- ③ Adjust LED Brightness  
Adjusts the brightness level of the LEDs on Lightinglink-enabled models  
-3 - +3 Initial: 0
- ④ Adjust LED Light Blinking Speed
- ⑤ Select Other Color  
Select Premium Direct Color or Dynamic mode

### LED Brightness

Adjusts the brightness level of the LEDs on Lightinglink-enabled models

#### Setting item:

LED Brightness

#### Setting contents:

-3~+3,0(Initial setting)

### LED Lighting Speed

Adjusts the level of LED Light Blinking Speed for Lightinglink compatible models

#### Setting item:

LED Lighting Speed

#### Setting contents:

-5~+5,0(Initial setting)

### Other Color



- Please connect the Lighting Link compatible model with the lighting level and speed setting values set to 0.

## Lighting Link settings Colors

- Lighting Link has 8 modes.

Lighting Link Setting Colors	Premium Direct color select					Other colors	Dynamic Mode	LED OFF
	Red	Blue	Green	Amber	White	7 colors		
Lighting Link & Sound boost background, Sub.W Ring Color	Red	Blue	Green	Amber	White	Rainbow1	Rainbow2	-
Key Color*	Red	Blue	Green	Amber	White	White	White	select
Background Screen Color*	Red	Blue	Green	Amber	White	White	White	select
Lighting Link System Lighting*								

\* key Color and Background Screen Color is linked when Colorlink is ON. Please see page 29.

\* If you select a color with the Lighting Link function, it will all change to the selected color pattern regardless of the current color settings for each.

\* BackgroundScreen color and keyColor can be changed individually after setting Lighting Link (page 29).

- Lighting Link System model is option.

# Setup

## Setup Operation


### To display the Setup Menu screen:


Your vehicle must be parked with the ignition key in the ACC or ON position. To do this, follow the procedures below.

- 1 Bring your vehicle to a complete stop at a safe location. Engage the parking brake.
  - 2 Release the parking brake. (For safety, release the parking brake while depressing the foot brake pedal).
  - 3 Engage the parking brake again.
- For automatic transmission vehicles, place the transmission lever in the Park position.
  - "Sound Setup" (page 30) can be set even not engaging the parking brake.


Now, the locking system for the Setup operation has been released. Engaging the parking brake can reactivate the Setup Menu, as long as the car's ignition has not been turned off. It is not necessary to repeat the above procedure (1 through 3).

Each time the ignition is turned OFF, perform the above procedure.

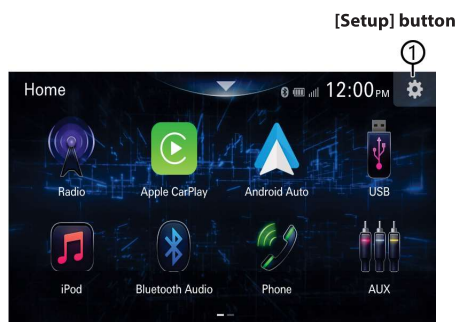

- 1 Touch the  (HOME) button. The HOME screen is displayed.

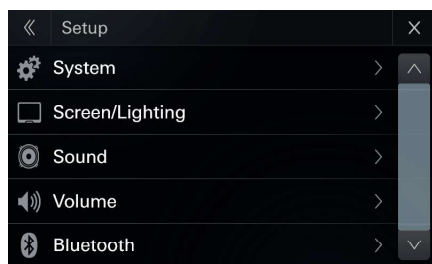


- 2 Touch  [Setup] button. The Setup main screen is displayed.



Scroll Bar

\* Touch [  ] or [  ] to show further hierarchies.

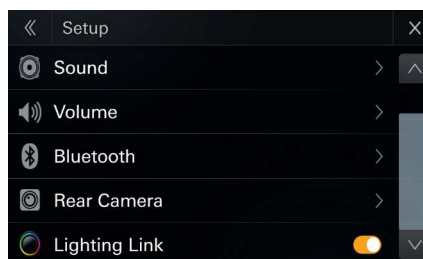

- 3 Touch the required setting list, then touch the setting item.

### Setting items:

System: See "System Setup" (page 26).

Screen/Lighting: See "Screen/Lighting Setup" (page 29).

Sound: See "Sound Setup" (page 30).

Volume: See "Volume Setup" (page 35).

Bluetooth: See "Bluetooth Setup" (page 35).

Rear Camera: See "Rear Camera Setup" (page 36).

Lighting Link ON/OFF: See "Lighting Link" (page 37).

## System Setup


[System] is selected on the Setup menu screen.

### Setting item:

System

### Setting contents:

Beep, Language, Time Adjust, Product Information, Software License, Connection Status, Steering Wheel Control, Reset

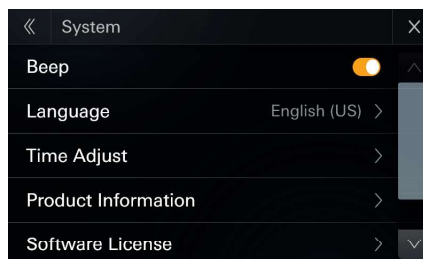

### Beep Setup

You can change the volume of the sound heard when a button is touched.

### Setting item:

Beep

### Setting contents:

Off, On (Initial setting)



## Language Setup

[Language] is selected on the System Setup Menu screen. The Setup menu, feedback information, etc. for this unit can be changed to appear in the selected language.

**Setting item:**

Language


**Setting contents:**

English (UK)

- The currently selected language is displayed.

## Time Adjust Setup

[Time Adjust] is selected on the System Setup Menu screen.

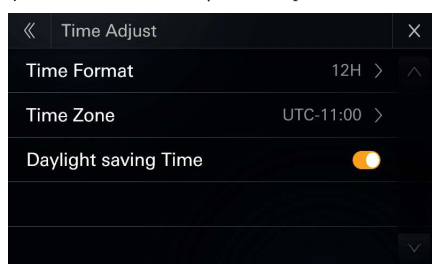

### Time Format

**Setting item:**

Time Format

**Setting items:**

12h, 24h (Initial setting)

### Time Zone

**Setting item:**

Time Zone

**Setting contents**

UTC-12.00h~UTC+14.00

### Daylight saving Time ON/OFF


**Setting item:**

Daylight saving Time

**Setting contents**

Off (Initial setting), On

## Product Information

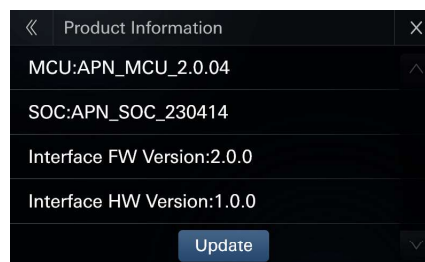

**Setting item:**

Display and updating the firmware version

- 1 Download the firmware update file into your computer.**
- 2 Inset a USB with FAT32 format into your computer, copy the correct upgrade file to the root directory**
- 3 Connect the USB storage device to this product.**
- 4 Touch [setup]>[System setup]>[Product Information]>[Update].**  
The firmware update file information will be read
- 5 After reading Touch[Update]**

Follow the on-screen prompts to update the firmware.


- This product will reset automatically after the firmware update is completed if the update is successful.
- If an error message on the screen, Repeat the preceding steps

## Software License

[Software License] Displaying the open source software license.




## Connection Status

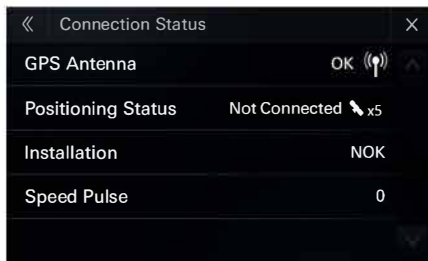

### GPS Antenna

- Display when there is an antenna [OK]
- Display without antenna [NOK]

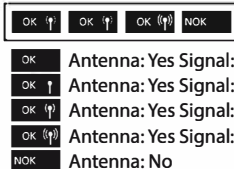

### Positioning Status

- Display [position]: When there is positioning
- Display [Not Available]: When there is no positioning
- Display [Not Connected]: When the serial port of the GPS module is not available


### Installation

- Install and learn to successfully display [OK],
- No learning success display [NOK]

### Speed Pulse

- Display pulse number "XXX" in unit time, and display "0" if not obtained.

## Steering Wheel Control

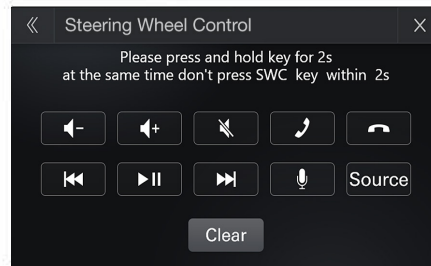

### Setting item:

Steering Wheel Control key learning

### Setting contents:

⏮ Vol. Up/ ⏪ Vol. Dn, 📞 ON HOOK, 📞 OFF HOOK, ⏮ Seek Up, ⏭ Seek Dn, 🔇 MUTE, ⏸ Play/pause, 🗣 Voice Recognition, Source (Mode)

- 1 Please press and hold key for 2s at the same time don't press SWC key within 2s
- 2 Follow the on-screen prompts to complete the operation
- 3 Success in learning  
When operation finished ,If you want to continue other key learning , please repeat the operation

- Learning learning during parking is allowed
- The same key supports learning for one time , if you want to relearning, please clear all the learned keys
- Touch the clear key to clear all the learned function
- No time limit for key learning
- Not support to learn the same function on the keys of different Steering,if you want to learn the same function,please clear all the learned keys
- On the key learning screen, pressing the learned key to clear all learned keys

## Reset


[Reset] is selected on the System Setup Menu screen. You can initialize all data, to restore the factory settings.

### Setting item:

Reset

- 1 Touch [Reset].
  - 2 After the confirmation message appears, touch [Yes].  
The system starts initialization.
- Do not turn on/off the power, change the ignition key position or until system restart is completed.

## Screen/Lighting Setup

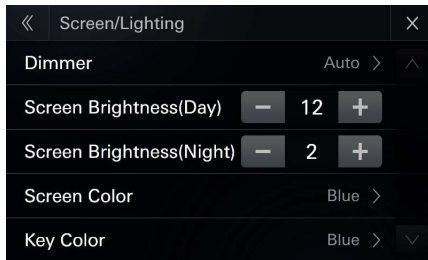

**Setting item:**  
Screen/Lighting

**Setting contents:**  
Dimmer, Screen Brightness (Day), Screen Brightness (Night), Screen Color, Key Color

### Dimmer

You can set day, night and auto three modes in dimmer

1. The screen backlighting brightness can be set in day/night mode
2. Auto Mode adjusts the backlighting brightness to the appropriate day/night brightness setting value based on the current ambient brightness

**Setting contents:**  
Day, Night, Auto (Initial setting)

**Day:**  
The backlight brightness is adjusted by setting the screen brightness setting (Day)

**Night:**  
The backlight brightness is adjusted by setting the screen brightness setting (night)

**Auto:**  
Automatically adjust the backlight brightness and select the Screen brightness (Day) or Screen Brightness (Night) setting value as the backlight brightness value based on the Day/Night lighting threshold

### Screen Brightness (Day)

**Setting item:**  
Level


**Setting contents:**  
1 to 32

### Screen Brightness (Night)

**Setting item:**  
Level

**Setting contents:**  
1 to 32

## Screen Color

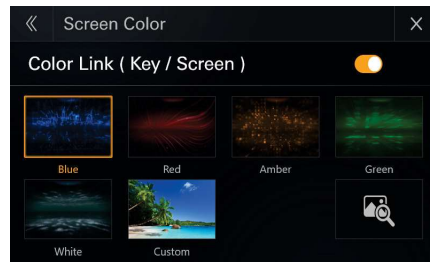

**Setting item:**  
Background Picture


**Setting contents:**  
You can set blue, red, amber, green, white five colors or other background pictures, you can also select the background picture to be set from the USB flash drive

**Setting item:**  
Color Link (Key/Screen)

**Setting contents:**  
Color link ON (Initial setting)

- You can select ON/OFF whether the button light and background picture linkage.

## Key Color

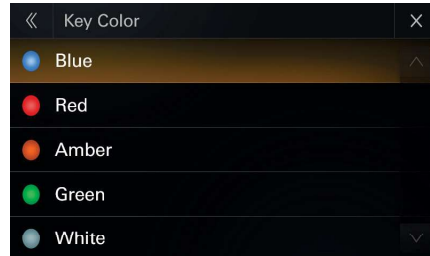

**Setting item:**  
Key Color

**Setting contents:**  
blue, red, amber, green, white

- Key color Settings can be set blue, red, amber, green, white five colors
- When the Color Link is ON, key Color is grayed out and cannot be selected.
- When the Lighting Link function is used, that selection takes precedence and all colors are switched (page 25).
- You can change the Key Color individually after selecting the color with the Lighting Link function.


## Sound Setup

[Sound] is selected on the Setup menu screen.  
You can set up items related to the sound quality.  
<Setting item>

Fader/Balance (page 30)
Bass/Treble (page 30)
EQ Setting (page 30)
Preset EQ (page 31)
X-Over (page 32)
Speaker Level (page 33)
Time Correction (page 32)
Sub Woofer (page 32)
Defeat (page 33)

\* Touch [▲] or [▼] to show further.

### Setting the Fader/Balance

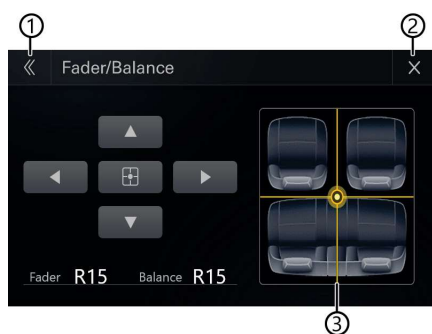


- ① Back  
Exit[Fader/Balance]Return [SOUND].
- ② Close  
Close the current screen and return to the source screen
- ③ Fader/Balance Image area  
Touch the desired point within the image area, or touch [◀], [▶], [▲] or [▼].

**Fader:**  
[15]Front to [15]Rear

**Balance:**  
[15]Left to [15]Right

- To reset to the initial setting (Fader: F=R, Balance: L=R), touch [⊕].

### Adjusting the Bass/Middle/Treble

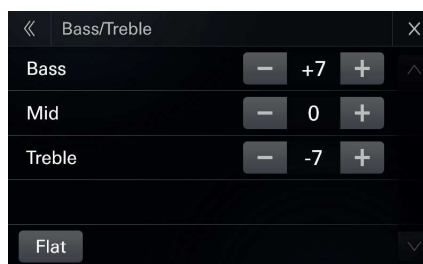

Touch [⊕] or [⊖] for each item to be adjusted.

**Setting item:**  
Bass, Middle, Treble

**Setting contents:**  
-7 to 7 (Initial setting: 0)

- To reset the initial setting (Bass: 0, Middle: 0, Treble: 0), touch [Flat].
- When the Defeat setting is [On], you cannot perform the set up.

### Adjusting the Parametric Equalizer Curve (EQ)

**Setting item:**  
EQ

- When the Defeat setting is [On], you cannot perform the set up.

#### 1 Adjust the EQ to your preference.



#### Adjusting the Band

Touch [Band] to select the band to be adjusted.

Band1 → Band2 → ... → Band8 → Band13 → Band1

- You can select a band directly by touching the screen.

#### Adjusting the Frequency

Touch of "Frequency" to adjust the frequency of the selected band

#### Adjustable frequency bands:

Band1:	50 Hz
Band2:	80 Hz
Band3:	125 Hz
Band4:	200 Hz
Band5:	315 Hz
Band6:	500 Hz
Band7:	800 Hz
Band8:	1.25k Hz
Band9:	2k Hz
Band10:	3.15k Hz
Band11:	5k Hz
Band12:	8k Hz
Band13:	12.5k Hz

#### Adjusting the Level

- 1** Select Band Slide up or down to adjust the level of selected band.

#### Setting contents:

-12 to 12 (Initial setting: 0)

- 2** To adjust another band, repeat step 1, and adjust all bands.
- 3** To store the adjusted setting value, touch and hold [Preset 1], [Preset 2], or [Preset 3] for at least 2 seconds.

- Band2, Band7 and Band12 are the same as the Bass and Middle controls. For details on setting Bass and Treble, see "Adjusting the Bass/Middle/Treble" (page 30).
- Settings exceeding the frequency of adjacent bands are not available
- While adjusting the EQ Setting, you should consider the frequency response of the connected speakers.
- When you apply the adjusted Band in the EQ setting screen, Preset EQ (page 31) is unselected
- Touch [Flat] to initialize all values.

#### Calling the EQ Setting adjusted value


Calling the pre-set EQ Setting adjusted value.

#### Touch [Preset 1], [Preset 2], or [Preset 3] on the EQ Setting screen.

The setting stored in the Preset will be recalled.

## Setting an Equalizer

6 typical equalizer settings are preset at the factory for a variety of musical source material. You can also preset an equalizer by customizing.

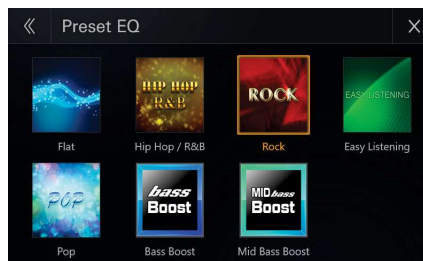

#### Setting item:


Preset EQ

#### Setting contents:

Flat (Initial setting), Hip Hop/R&B, Rock, Easy Listening, Pop, Bass Boost Mid Bass Boost

- When the Defeat setting is [On], you cannot perform the set up.
- Only one type can be set .
- you can set [preset1/preset2/preset3 ]in the EQ setting screen. (page 30)
- When you set [preset1/preset2/preset3 ]in the EQ setting screen.(page 30). Preset EQ is unselected

## Setting the Subwoofer

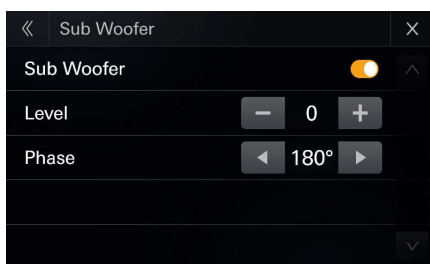

### Turning Subwoofer ON/OFF

If an optional subwoofer is connected to the unit, make the following setting.

**Setting item:**  
Sub Woofer

**Setting contents:**  
Off (Initial setting), On

### Adjusting the Subwoofer Level

**Setting item:**  
Level

**Setting contents:**  
0 (Initial setting) to 15

- This setting is only available when "Sub Woofer" is set to [On].

### Setting the Subwoofer Phase

The subwoofer output phase is toggled Subwoofer Normal (0°) or Subwoofer Reverse (180°).

**Setting item:**  
Phase

**Setting contents:**  
0° (Initial setting), 180°

- This setting is only available when "Sub Woofer" is set to [On].

## Adjusting the Crossover Settings (X-Over)

Before performing the following procedures, see "About the Crossover" (page 33).



### Selecting the Front HPF

**Setting item:**  
Front HPF

**Setting contents:**  
Off (Initial setting)/ 25 / 32 / 40 / 50 / 63 / 80 / 100 / 125 / 160 / 200 / 250 Hz

### Selecting the Rear HPF

**Setting contents:**  
Rear HPF

**Setting contents:**  
Off (Initial setting)/ 25 / 32 / 40 / 50 / 63 / 80 / 100 / 125 / 160 / 200 / 250 Hz

### Selecting the LPF


**Setting contents:**  
LPF

**Setting contents:**  
Off (Initial setting)/ 25 / 32 / 40 / 50 / 63 / 80 / 100 / 125 / 160 / 200 / 250 Hz

- This setting is only available when "Sub Woofer" is set to [On].

## Adjusting the Time Correction (TCR)

Before performing the following procedures, see "About Time Correction" (page 34).

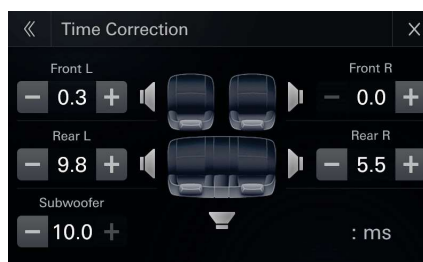

**Setting item:**  
TCR


**Touch [ - ] or [ + ] for each speaker to adjust the time .**  
0.0 msec to 10.0 msec (0.1 msec/step)

- If the Subwoofer setting is [Off], the Subwoofer setting cannot be edited (page 32).

## Setting the Speaker Level

### Setting item:

Speaker Level

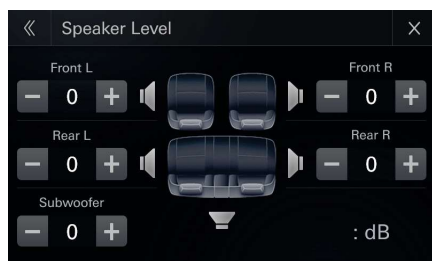

Touch [ - ] or [ + ] for each speaker to adjust the Speaker.  
-24dB to 10dB (0.1 dB/step)

## Setting Defeat

If Defeat is [On], the EQ and Equalizer setting are turned Off. This disables any settings made for these functions.

### Setting item:

Defeat

### Setting contents:

Off (Initial setting) / On

## About the Crossover

### Crossover (X-Over):

This unit is equipped with an active crossover. The crossover limits the frequencies delivered to the outputs. Each channel is controlled independently. Thus, each speaker pair can be driven by the frequencies for which they have been optimally designed.

The crossover adjusts the HPF (high pass filter) or LPF (low pass filter) of each band.

Adjustments should be made according to the reproduction characteristics of the speakers. Depending on the speakers, a passive network may not be necessary. If you are unsure about this point, please consult your authorized Alpine dealer.

25 Hz, 32Hz, 40Hz, 50Hz, 63Hz, 80Hz

	Cut-off frequency	
	HPF	LPF
Subwoofer (LPF)	---	25Hz, 32Hz, 40Hz, 50Hz, 63Hz, 80Hz, 100Hz, 125Hz, 160Hz, 200Hz, 250Hz
Rear speaker (HPF)	25Hz, 32Hz, 40Hz, 50Hz, 63Hz, 80Hz, 100Hz, 125Hz, 160Hz, 200Hz, 250 Hz	---
Front speaker (HPF)	25Hz, 32Hz, 40Hz, 50Hz, 63Hz, 80Hz, 100Hz, 125Hz, 160Hz, 200Hz, 250Hz	---

- **HPF (high pass filter):** Cuts the lower frequencies and allows the higher frequencies to pass.
- **LPF (low pass filter):** Cuts the higher frequencies and allows the lower frequencies to pass.
- Do not use a tweeter without the HPF on or set to a low frequency, as it may cause damage to the speaker due to the low frequency content.
- Adjustment should be made according to the recommended crossover frequency of the connected speakers. Determine the recommended crossover frequency of the speakers. Adjusting to a frequency range outside that recommended may cause damage to the speakers. For the recommended crossover frequencies of Alpine speakers, refer to the respective Owner's Manual. We are not responsible for damage or malfunction of speakers caused by using the crossover outside the recommended value.


## About Time Correction

The distance between the listener and the speakers in a car vary widely due to the complex speaker placement. This difference in the distances from the speakers to the listener creates a shift in the sounds image and frequency characteristics. This is caused by the time delay between the sound reaching the listener's right versus the left ear.

To correct this, this unit is able to delay the audio signal to the speakers closest to the listener. This effectively creates a perception of increased distance for those speakers. The listener can be placed at an equal distance between the left and right speakers for optimum staging. The adjustment will be made for each speaker in 3.4 cm steps.

### Example 1. Listening Position: Front Left Seat

Adjust the time correction level of the front left speaker to a high value and the rear right to zero or a low value.

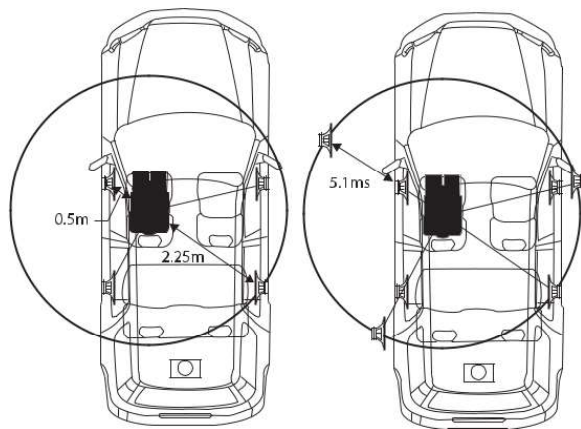

The sound is not balanced because the distance between the listening position and the various speakers is different. The difference in distance between the front left speaker and the rear right speaker is 1.75 m (68-7/8"). Here we calculate the time correction value for the front left speaker in the diagram on the above.

Conditions:

Farthest Speaker – listening position : 2.25 m (88-9/16")

Front left speaker – listening position : 0.5 m (19-11/16")

Calculation:  $L = 2.25 \text{ m} - 0.5 \text{ m} = 1.75 \text{ m}$  (68-7/8")

Time correction =  $1.75 \div 343 \times 1,000 = 5.1$  (ms)

\* Speed of sound: 343 m/s (765 mph) at 20°C

In other words, giving the front left speaker a time correction value of 5.1 ms makes it seem as if its distance from the listener is the same as the distance to the farthest speaker.

Time correction eliminates the differences in the time required for the sound to reach the listening position.

The time of the front left speaker is corrected by 5.1 ms so that its sound reaches the listening position at the same time as the sound of other speakers.

### Example 2. Listening Position: All Seats

Adjust the time correction level of each speaker to almost the same level.

- 1 Sit in the listening position (driver's seat, etc.) and measure the distance (in meters) between your head and the various speakers.**
- 2 Calculate the difference between the distance correction value to the farthest speaker and the other speakers.**

$$L = (\text{distance to farthest speaker}) - (\text{distance to other speakers})$$

These values are the time correction values for the different speakers. Setting these values to make each sound reach the listening position at the same time as the sound of other speakers.

Time Correction Value List


Time Difference (msec)	Distance (cm)	Distance (inch)	Time Difference (msec)	Distance (cm)	Distance (inch)
0.0	0.0	0.0	5.1	173.4	68.3
0.1	3.4	1.3	5.2	176.8	69.7
0.2	6.8	2.7	5.3	180.2	71.0
0.3	10.2	4.0	5.4	183.6	72.4
0.4	13.6	5.4	5.5	187.0	73.7
0.5	17.0	6.7	5.6	190.4	75.0
0.6	20.4	8.0	5.7	193.8	76.4
0.7	23.8	9.4	5.8	197.2	77.7
0.8	27.2	10.7	5.9	200.6	79.1
0.9	30.6	12.1	6.0	204.0	80.4
1.0	34.0	13.4	6.1	207.4	81.7
1.1	37.4	14.7	6.2	210.8	83.1
1.2	40.8	16.1	6.3	214.2	84.4
1.3	44.2	17.4	6.4	217.6	85.8
1.4	47.6	18.8	6.5	221.0	87.1
1.5	51.0	20.1	6.6	224.4	88.4
1.6	54.4	21.4	6.7	227.8	89.8
1.7	57.8	22.8	6.8	231.2	91.1
1.8	61.2	24.1	6.9	234.6	92.5
1.9	64.6	25.5	7.0	238.0	93.8
2.0	68.0	26.8	7.1	241.4	95.1
2.1	71.4	28.1	7.2	244.8	96.5
2.2	74.8	29.5	7.3	248.2	97.8
2.3	78.2	30.8	7.4	251.6	99.2
2.4	81.6	32.2	7.5	255.0	100.5
2.5	85.0	33.5	7.6	258.4	101.8
2.6	88.4	34.8	7.7	261.8	103.2
2.7	91.8	36.2	7.8	265.2	104.5
2.8	95.2	37.5	7.9	268.6	105.9
2.9	98.6	38.9	8.0	272.0	107.2
3.0	102.0	40.2	8.1	275.4	108.5
3.1	105.4	41.5	8.2	278.8	109.9
3.2	108.8	42.9	8.3	282.2	111.2
3.3	112.2	44.2	8.4	285.6	112.6
3.4	115.6	45.6	8.5	289.0	113.9
3.5	119.0	46.9	8.6	292.4	115.2
3.6	122.4	48.2	8.7	295.8	116.6
3.7	125.8	49.6	8.8	299.2	117.9
3.8	129.2	50.9	8.9	302.6	119.3
3.9	132.6	52.3	9.0	306.0	120.6
4.0	136.0	53.6	9.1	309.4	121.9
4.1	139.4	54.9	9.2	312.8	123.3
4.2	142.8	56.3	9.3	316.2	124.6
4.3	146.2	57.6	9.4	319.6	126.0
4.4	149.6	59.0	9.5	323.0	127.3
4.5	153.0	60.3	9.6	326.4	128.6
4.6	156.4	61.6	9.7	329.8	130.0
4.7	159.8	63.0	9.8	333.2	131.3
4.8	163.2	64.3	9.9	336.6	132.7
4.9	166.6	65.7			
5.0	170.0	67.0			



## Volume Setup

### Volume Setup

[Volume] is selected on the Setup menu screen.

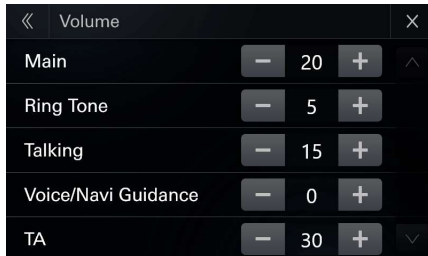

**Setting item:**

Main.Ring Vol.Talking.Voice/Navi Guidance.TA

**Setting contents:**

Main :01 to 35(Initial setting: 10)  
Ring Vol :01 to 35(Initial setting: 18)  
Ring Vol :01 to 35(Initial setting: 18)  
Voice/Navi Guidance :01 to 35(Initial setting: 18)  
TA :01 to 35(Initial setting: 10)

## Bluetooth Setup


[Bluetooth] is selected on the Setup menu screen.

**Setting item:**

Bluetooth

**Setting contents:**

Bluetooth,Devices List, Devices Info,

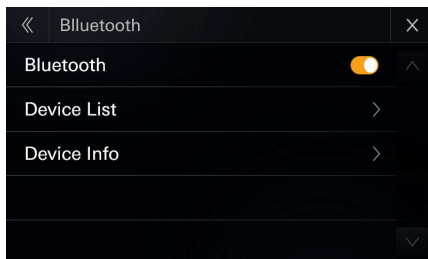


Bluetooth

- You can turn Bluetooth on or off

## Device List

[Devices] is selected on the Bluetooth Setup Menu screen.

You can register and set up Bluetooth compatible devices.

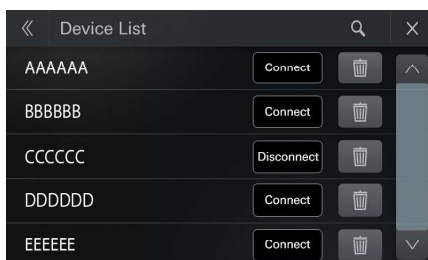

## Pairing the Bluetooth Device

- 1 Touch [ Q ] to enter[Search] to search for Devices.
- 2 Select a device and follow the on-screen prompts to connect devices
- 3 Screen prompts 6 character Numeric passkey to pair  
When the device registration is complete, a message appears and the device returns to [Device Lis].
  - The Bluetooth registration process differs depending on the device version and SSP (Simple Secure Pairing). If a 4 or 6 character Numeric Comparison appears on this system, enter the Numeric Comparison on the Bluetooth device.
  - If a 6 character Passkey appears on this system, make sure the same passkey is displayed on the Bluetooth device, and follow the screen.

## Fast pairing the Bluetooth Device

Select one of 5 paired Bluetooth compatible devices that you previously registered.

- 1 Touch [Connect] on the Bluetooth Setup Menu screen.

## Deleting a Bluetooth Device from the list

You can delete the information of a previously connected Bluetooth compatible device.

- 1 Touch [ ] on the Bluetooth Setup Menu screen.
- 2 Touch [Yes].
  - Touching [No] will cancel the setting.

## Searching for a Bluetooth Device

**Setting item:**


Search

- 1 Touch [Search] on the Bluetooth Setup Menu screen.  
The Bluetooth devices can be searched are displayed in a list.
- 2 Touch the device you want to connect from the list.  
You can register up to 5 Bluetooth compatible mobile phones.
- 3 When the device registration is complete, a message appears and the device returns to [Device List].
  - Connect to new Bluetooth compatible device when there are 5 paired devices registered , the system will delete the last paired device automatically

## Displaying Bluetooth Information

[Info] is selected on the Bluetooth Setup Menu screen.

You can display the Bluetooth device name and device address of this unit.

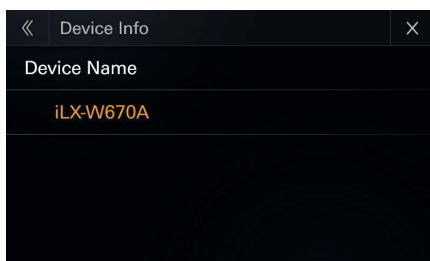

## Auto Connection

When the ACC is turned ON, the Bluetooth Hands-Free device is automatically connected. After connecting to the Hands-Free device, the Bluetooth Audio device is also connected automatically.

## Downloading the Phonebook

If PBAP is connected, you can download the phonebook from the device.

- When the device is disconnected, the downloaded phonebook is not shown.

## Rear Camera Setup


[Camera] is selected on the Setup Menu screen. You can set up items related to the Rear Camera.

**Setting item:**

Rear Camera

**Setting contents:**

Camera, Parking Guide Adjust, Video Setup

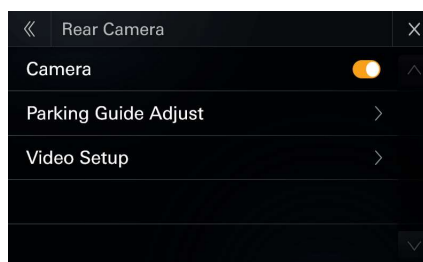

### Camera

**Setting item:**

Camera


**Setting contents:**

Off, On (Initial setting),

- The rear camera initial setting is ON, when you turn off the camera, you cannot open and setup the camera.

## Parking Guide Adjust Setup

You can adjust the camera guide position.

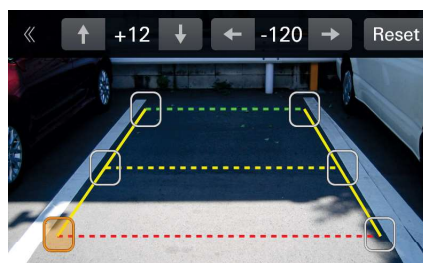

**Setting item:**


Parking Guide Adjust

**Setting contents:**

Touch the icon you want to move.

- 1 Touch the icon you want to move.**
- 2 Touch [↑][↓][←][→] to move the icon.**  
Touching [Reset] clears adjustments and returns to the setting before guide line alteration.
- 3 Touch [⏪] to complete the adjustment and return to the previous screen.**

## Video Setup

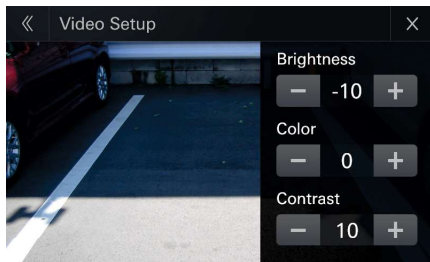

### Adjusting Brightness

**Setting item:**  
Brightness

**Setting contents:**  
-10 to 10 (Initial setting: 0)

- You can adjust the brightness of USB Video and reverse video between MIN(-10) and MAX(10)

### Adjusting Color of Display

**Setting item:**  
Colors

**Setting contents:**  
-10 to 10 (Initial setting: 0)

- You can adjust the color of USB Video and reverse video between MIN(-10) and MAX(10)

### Adjusting Display Contrast


**Setting item:**  
Contrast

**Setting contents:**  
-10 to 10 (Initial setting: 0)

- You can adjust the Contrast of USB Video and reverse video between MIN(-10) and MAX(10)

## Lighting Link ON/OFF

[Lighting link] is selected on the Setup menu screen.

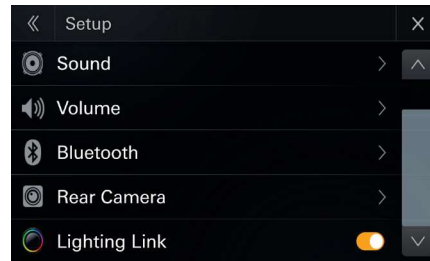

### Setting item:

Lighting Link

### Setting contents

On:

Lighting link icon displayed on sound boost screen

Off:

The Lighting link icon on the sound boost screen is not displayed




**Distance guidance mark**


The distance guides represent the ground level distance from the rear bumper. It is difficult to accurately estimate the distance to objects above ground level.

In the following example, the distance to A is 0.5 m and the distance to B is 1 m.

<Screen>

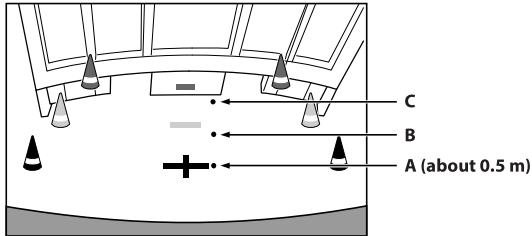

<Positions of A, B and C>

 

In the screen, according to the distance guidance marks, the truck seems to be parked about 1 m away (at the position B). In actual fact, however, if you reversed to position A, you would collide with the truck.

In the screen, positions A, B and C seem to be located in order of proximity. However, in actual fact, the position A and C are the same distance, and B is farther away than positions A and C.


- The car width extension mark represents the distance to the road surface. The distance to an object on the road is not accurately represented by the guides.

**Error between the screen and the actual road surface**

In the following conditions, errors are produced between the screen guidance and the actual road surface. (The illustrations represent a case when the camera is installed in the standard position.)


**When there is a steep upward slope behind the car (example)**

<Screen>

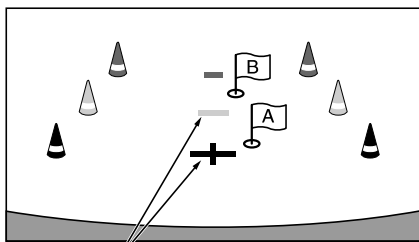

Distance guidance marks


<Situation of the car>

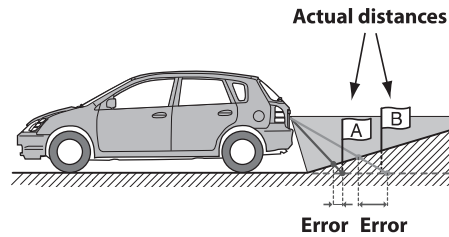


The distance guidance mark represents the distance to a flat road surface. Therefore in the case of an upward slope behind the car, the distance guides are displayed closer to the rear bumper than the actual distance. For example, if there is an obstacle on the upward slope, it may appear farther away than its actual position. Also, an error may occur between the guidance and the actual path of the car on the road surface.

**When there is a steep downward slope behind the car (example)**

<Screen>

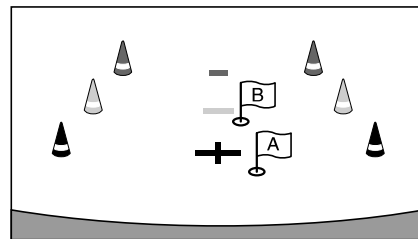

<Situation of the car>

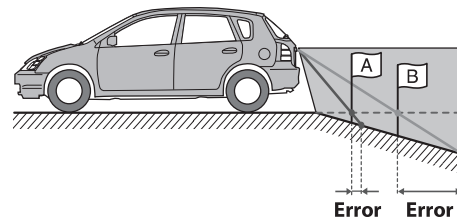

In the case of a downward slope behind the car, the distance guides are displayed farther from the rear bumper than the actual distance. If there is an obstacle on the downward slope, it seems closer than its actual position. Also, an error may occur between the guidance and the actual path of the car on the road surface.

# Information

## About the Supported Formats

### About MP3/WMA/AAC/FLAC/WAV

#### CAUTION

Except for private use, duplicating audio data or distributing, transferring, or copying it, whether for free or for a fee, without permission of the copyright holder is strictly prohibited by the Copyright Act and by international treaty.

### About Audio Format

#### Method for creating MP3/WMA/AAC/FLAC/WAVE/Ogg/APE (USB Flash drive) files

Audio data is compressed using software with MP3/WMA/AAC/FLAC/WAVE/Ogg/APE (USB Flash drive) codecs. For details on creating MP3/WMA/AAC/FLAC/WAVE/Ogg/APE(USB Flash drive files, refer to the user's manual for that software. MP3/WMA/AAC/FLAC/WAV/Ogg/APE (USB Flash drive) files that are playable on this device have the file extensions.

MP3: ".mp3", ".mpa", ".m4a"  
WMA: ".wma"  
AAC: ".m4a"  
FLAC: ".flac", ".fla"  
WAVE: ".wav"  
Ogg: ".ogg"  
APE: ".ape"

WMA is not supported for the following files, Windows Media Audio Professional, Windows Media Audio 10 std or Windows Media Audio 10 Pro Lossless.

There are many different versions of the AAC format. Confirm that the software being used conforms to the acceptable formats listed above. It's possible that the format may be unplayable even though the extension is valid. Playback of AAC files encoded by iTunes is supported.

#### Supported playback sampling rates and bit rates

Coding: MP1  
Bit rates: 32kbps-448kbps  
Sampling rates: 32Khz,44.1Khz,48Khz

Coding: MP2  
Bit rates: 32kbps-384kbps  
Sampling rates: 16Khz,22.05Khz,24Khz

Coding: MP3  
Bit rates: 32kbps-320kbps  
Sampling rates: 8Khz,11.025Khz,12Khz(low sample rate)

Coding: AAC-LC/HE-AAC  
Bit rates: 288 kbps 48K per channel  
Sampling rates: 8Khz,11.025Khz,12Khz,16Khz,  
22.05Khz,24Khz,32Khz,44.1Khz,48Khz,  
64Khz,88.2Khz,96Khz

#### WAVE (USB Flash drive)

Coding: LPCM IMA-ADPCM  
Bit rates: up to 9216kbps  
Sampling rates: 44.1Khz,48Khz,88.2Khz,192Khz,176.4Khz

\* Bit depths : Support up to 32 Bit  
Not support float format

#### WMA (USB Flash drive)

Coding: WMA STD,WMA Prof  
Bit rates: up to 320kbps  
Sampling rates: 8Khz,11.025Khz,16Khz,22.05Khz,  
32Khz,44.1Khz,48Khz

\* wma v1, wma lossless, and wma voice are not supported

#### AAC (USB Flash drive)

Coding: AAC-LC/HE-AAC  
Bit rates: 288 kbps 48K per channel  
Sampling rates: 8Khz,11.025Khz,12Khz,16Khz,22.05Khz,  
24Khz,32Khz,44.1Khz,48Khz,64Khz, 88.2Khz,96Khz

#### OGG (USB Flash drive)

Coding: Vorbis  
Bit rates: 32 kbps-500kbps(stereo)/44.1Khz  
Sampling rates: 8Khz,11.025Khz,12Khz,16Khz,22.05Khz,  
24Khz,32Khz,44.1Khz,

\* Partial support Floor type 0.

#### FLAC (USB Flash drive)

Coding: FLAC  
Bit rates: VBR nondestructive  
Sampling rates: 8Khz,16Khz,22.05Khz,24Khz,32Khz,  
44.1Khz,48Khz,96Khz,88.2Khz,176.4Khz, 192Khz

\* Not support block > 16384

## About Audio Format

Files that are playable on this device have the file extensions.

AVI: ".avi"  
MPEG 1/2: ".mpg", ".mpeg", ".vob", ".dat"  
MPEG4: ".mp4", ".m4v"  
QuickTime: ".mov", ".qt"  
Matroska Video: ".mkv"  
TS Stream: ".ts", ".trp", ".m2ts", "<BD>", ".MTS", "<AVCHD>"  
3GP: ".3gp"

#### Supported playback Video coding and Audio coding

##### Format: AVI

Video Coding: MPEG-1 Video, MPEG-4 SP/ASP(FMP4), H.263, Sorenson H.263(FLV1), H.264, Xvid, WMV 9 / VC - 1, MJPEG (resolution <=1280\*720)

Audio Coding: MP3, AC3, WMA Std / Prof, LPCM / ADPCM

##### Format: MPEG 1/2

###### File Name: .mpg .mpeg

Video Coding: MPEG-1 Video, MPEG-2 Video  
Audio Coding: MP1 / MP2 / MP3, AAC-LC AC3, LPCM

###### File Name: .vob

Video Coding: MPEG-1 Video, MPEG-2 Video  
Audio Coding: MP1 / MP2 / MP3, AC3, LPCM

###### File Name: .dat

Video Coding: MPEG-1 Video  
Audio Coding: MPEG-1 Audio Layer II

##### Format: MPEG4

###### File Name: .mp4

Video Coding: MPEG-1 Video, MPEG-2 Video  
Audio Coding: MP1 / MP2 / MP3, AAC-LC AC3, LPCM

###### File Name: .vob

Video Coding: MPEG-2 Video, MPEG-4 SP/ASP, H.264, Xvid, MJPEG (resolution <=1280\*720)

Audio Coding: MP3, AAC-LC / HE-AAC, AC3, LPCM

##### Format: Flash

###### File Name: .flv

Video Coding: Sorenson H.263(FLV1), H.264  
Audio Coding: MP3, AAC-LC / HE-AAC, LPCM / ADPCM

###### File Name: .swf

Video Coding: Sorenson H.263(FLV1), H.264  
Audio Coding: MP3, AAC-LC / HE-AAC, LPCM / ADPCM

**Format: QuickTime****File Name: .mov .qt**

Video Coding: MPEG-4 SP/ASP, H.264, MJPEG (resolution <=1280\*720)  
 Audio Coding: MP3, AAC-LC / HE-AAC, LPCM

**Format: Matroska Video****File Name: .mkv**

Video Coding: MPEG-1 Video, MPEG-2 Video, MPEG-4 SP/ASP, H.264, Xvid, WMV9 / VC-1  
 Audio Coding: MP3, AC3, LPCM, AAC-LC / HE-AAC, Cook

**Format: TS Stream****File Name: .ts .trp**

Video Coding: MPEG-1 Video MPEG-2 Video MPEG-4 ASP H.264 WMV9 / VC-1  
 Audio Coding: MP1 / MP2 / MP3, AC3, AAC-LC / HE-AAC

File Name: .m2ts <BD>

Video Coding: MPEG-2 Video, H.264, WMV9 / VC-1

Audio Coding: AC3, LPCM

File Name: .MTS <AVCHD>

Video Coding: H.264

Audio Coding: AC3, LPCM

**Format: 3GP**

File Name: .3gp

Video Coding: MPEG-4 SP/ASP, H.263 H.264

Audio Coding: ACC-LC / HE-ACC

## About Photo Format

**Format: Jpg, jpeg**

Resolution ratio: Maximum 4096 x 4096, minimum 32x32

**Format: Png**

Resolution ratio: Maximum 576 x 720 minimum 32x32

**Format: bmp**

Resolution ratio: Maximum 936 x 1920 minimum 32x32

**ID3 tags/WMA tags**

If the music supports ID3 tag and track title, music title, author, album name and album cover are to be displayed.  
 If there is no track title, "No Name" will be displayed.  
 If there is no album name, the name of the folder will be displayed, if the song name is not recognized, it will be garbled, if there is no album cover, it will not be displayed.

**Playing back file**

- The files are prepared, then written to a USB flash drive.
- Connect iPod/Android MSC

**Maximum numbers of playable files/folders****Maximum files numbers of device:**

USB Flash drive(Auido/Video/Photo):9999

USB Flash drive(Photo):999

iPod:2000

Android MSC: Same as USB

**Maximum files numbers of folders:**

USB Flash drive(Auido/Video/Photo):999

iPod:No folder, only a playlist is available with up to 100 files

Android MSC: Same as USB

**Maximum folders numbers of device:**

USB Flash drive(Auido/Video/Photo):1000

iPod:No folder, up to 100 playlists

Android MSC: Same as USB

- Supports a maximum of 256 GB USB

- Largest playable file size:

Audio files :4GB

Video files: 4 GB

Photo files: 10K-6M

Playback may not be performed if a disc exceeds the limitations described above.

**Media supported**

The media that this device can play back a USB flash drive.

**Corresponding File Systems**

This device supports FAT 16/32, NTFS.

The maximum nested folder depth is 8 (including the root directory).

**Order/Search of files****Display and sort according to the head character**

Display in the order of 1 -> 2 -> 3 below.

0: Folder :When there are folders, the folders are displayed ahead of the files

1: Number ( represented by "#" on the Right Search Bar )

2: English Alphabet

3: Shorting order of Unicode

**Right Search Bar (order of list)**

1: Number ( represented by "#" on the Right Search Bar )

2: English Alphabet

- Search only the files with numeric or English alphabetic headers

**Terminology****Bit rate**

This is the "sound" compression rate specified for encoding. The higher the bit rate, the higher the sound quality, but also the larger the files.

**Sampling rate**

This value shows how many times per second the data is sampled (recorded). For example, music CDs use a sampling rate of 44.1 kHz, so the sound is sampled (recorded) 44,100 times per second. The higher the sampling rate, the higher the sound quality, but also the larger the volume of data.

**Encoding**

Converting music CDs, WAVE (AIFF) files, and other sound files into the specified audio compression format.

**Tag**

Song information such as track titles, artist names, album names, etc., written into MP3/WMA/AAC/FLAC/WAVE/Ogg/APE (USB flash drive) files.

**Root folder**

The root folder (or root directory) is found at the top of the file system. The root folder contains all folders and files. It is created automatically for all burned discs.

---

## In Case of Difficulty

---

**If you encounter a problem, please turn the power off, then on again. If the unit is still not functioning normally, please review the items in the following checklist. This guide will help you isolate the problem if the unit is at fault. Otherwise, make sure the rest of your system is properly connected, or then consult your authorized Alpine dealer.**

### **Basic**

#### **No function or display.**

- Vehicle's ignition is off.
  - If connected according to the instructions, the unit will not operate with the vehicle's ignition off.
- Improper power lead connections.
  - Check power lead connections.
- Blown fuse.
  - Check the fuse on the battery lead of the unit; replace with the proper value if necessary.

#### **No sound or unnatural sound.**

- Incorrect setting of volume/balance/fader controls.
  - Readjust the controls.
- Connections are not properly or securely made.
  - Check the connections and firmly connect.

#### **Screen not displayed.**

- Brightness/Contrast control is set at the minimum position.
  - Adjust the Brightness/Contrast control.
- Temperature in the vehicle is too low.
  - Increase the vehicle's interior temperature to operation temperature range.
- Connections to the Auxiliary Device are not securely made.
  - Check the connections and firmly connect.
- The Parking Brake Lead is not connected.
- The Parking Brake is not engaged.
  - Connect the Parking Brake Lead, then engage the Parking Brake.

#### **Movement of displayed picture is abnormal.**

- Temperature in the vehicle is too high.
  - Allow the vehicle's interior temperature to cool.

### **Radio**

#### **Unable to receive stations.**

- No antenna, or open connection in the antenna cable.
  - Make sure the antenna is properly connected; replace the antenna or cable if necessary.

#### **Unable to tune stations in the seek mode.**

- You are in a weak signal area.
  - Change the radio frequency manually.
- If the area you are in is a primary signal area, the antenna may not be grounded and connected properly.
  - Check your antenna connections; make sure the antenna is properly grounded at its mounting location.
- The antenna may not be the proper length.
  - Make sure the antenna is fully extended; if broken, replace the antenna with a new one.

#### **Broadcast is noisy.**

- The antenna is not the proper length.
  - Extend the antenna fully; replace it if it is broken.
- The antenna is poorly grounded.
  - Make sure the antenna is grounded properly at its mounting location.
- The station signal is weak and noisy.
  - If above solution does not work, tune in another station.

### **USB Audio**

#### **Unit does not operate.**

- Condensation.
  - Wait a while (about 1 hour) for the condensation to dry.

#### **Picture is unclear or noisy.**

- Vehicle's battery power is weak.
  - Check the battery power and wiring.  
(The unit may malfunction if the battery power is under 11 volts with a load applied.)



---

## If this Message Appears

---

Various messages are displayed on the screen during operation. In addition to the messages telling you the current status or providing guidance for the next operation, there are also the following error messages. If one of these error messages is displayed, carefully follow the instructions in the solution column.

---

### System

#### **ATTENTION!**

#### **Viewing of front seat video source while driving is strictly prohibited.**

- A setup operation, etc., was carried out while the vehicle was running.
    - Move the vehicle to a safe location, stop, and engage the parking brake, then carry out this operation.
- 

### Audio/Visual

#### **This content cannot be played.**

- Unsupported content .
  - Change to play supported contents type.

#### **This device is not supported./Unsupport USB device**

- Unsupported device.
  - Change to play supported USB device.

#### **Device No Response.**

- No response from the device.

#### **USB Hub is not supported.**

- The USB hub is not supported.

#### **No Audio.**

- There is no audio data in the current video file.
  - Download a video file with audio data in it .

#### **Audio format not supported**

- Not supported audio format.
  - Download supported audio format to USB flash drive.

#### **Audio trick not supported/Video Trick not supported**

- Prompts fast forwarding / reversing or jumping on current audio /video is not supported.
  - Change the current audio /video format.

#### **Video other warning**

- Prompts unexpected warning message.
  - Change to play other video.

#### **Video format not supported**

- Unsupported video format.
  - Change to play the supported video format.

#### **Video other error**

- Unknown error.
  - Change to play other video.

#### **No Artist (/ No Song / No album)**

- There are no tag-info in the USB Audio / iPod Audio.
  - Change to play audio-file with tag-info

#### **No Date**

- There are no data in the USB flash drive.
    - Download data to the USB flash drive and connect to this unit.
- 

### Bluetooth

#### **No Bluetooth device were found**

- The Bluetooth audio device was not connected correctly.
    - Check the settings for the unit and the Bluetooth audio device and reconnect
- 

### Phone

#### **Empty**

- The phone book is empty.

#### **Phone book access is not authorized**

- The phone book download is not supported.
  - On Enable phone book permission.

#### **Handsfree device is not connected**

- Hands-Free Profile is not connected.
    - Connect Hands- Free Profile .
- 

### AUX

#### **Picture off for your safety.**

- While the vehicle is moving.
    - Parking.
- 

### HOME

#### **No devices available connect an Android Phone with USB cable.**

- When Android Auto is not connected , touch Android Auto icon , this message is displayed .

#### **Caution! AMP Overload.**

- When two volume cables are connected ,this message is displayed.
  - Take apart the volume cable and reboot the unit.

#### **Caution! USB Overcurrent.**

- Prompts USB Overcurrent
    - Remove the USB and reboot the unit
- 

### Apple CarPlay

#### **The GNSS antenna is disconnected.**

- The GPS antenna is disconnected or bad connected.
    - Connect the GPS antenna.
- 

### Setup

#### **Data check error..**

- Upgrade firmware check error
  - Exit upgrade progress

#### **There is no photo in this device.**

- No photo in this device
    - Download the photo with supported format ((JPG,JPEG,PNG,BMP))to this device
-



## Specifications

### MONITOR SECTION

Screen Size	6.75"
LCD Type	Normally white, Transmissive
Operation System	a-Si TFT active matrix
Number of Picture Elements	1,152,000 pcs. (800 × 480 × 3(RGB))
Effective Number of Picture Elements	99% or more
Illumination System	LED

### FM TUNER SECTION

Tuning Range	87.7 – 107.9 MHz
Mono Usable Sensitivity	< 9 dBu (75 ohms)
50 dB Quieting Sensitivity	< 5 dBu (75 ohms)
Signal-to-Noise Ratio	65 dB
Stereo Separation	35 dB

### AM TUNER SECTION

Tuning Range	530 – 1,710 kHz
Usable Sensitivity	34 dBu

### USB SECTION

USB requirements	USB 2.0
Max. Power Consumption	1,500 mA (CDP Support)
USB Class	USB (Play From Device)/ USB (Mass Storage Class)
File System	FAT16/32
Number of Channels	2-Channels (Stereo)
Frequency Response*1	17 – 20,000 Hz (±1 dB)
Total Harmonic Distortion	0.05% (at 1 kHz)
Dynamic Range	90 dB (at 1 kHz)
Signal-to-Noise Ratio	85 dB
Channel Separation	75 dB (at 1 kHz)

\*1 Frequency response may differ depending on the encoder software/bit rate.

### Bluetooth SECTION

Bluetooth Specification	Bluetooth V5.0
Output Power Profile	< +4dBm Ave. (Power class 2) HFP (Hands-Free Profile) PBAP (Phone Book Access Profile) A2DP (Advanced Audio Distribution Profile) AVRCP (Audio/Video Remote Control Profile)

### GENERAL

Power Requirement	14.4 V DC (10.8 – 15.1 V allowable)
Operating temperature	-4°F to +140°F (-20°C to +60°C)
Power Output	16 W RMS × 4 <sup>2</sup> *2 Primary amplifier ratings per CEA-2006 Standard <ul style="list-style-type: none"><li>• Power output: measured at 4 Ohms and ≤ 1% THD+N</li><li>• S/N: 80 dBA (reference: 1 W into 4 Ohms)</li></ul>
Weight	0.9 kg
Audio output level	Preout (Front, Rear): 4V/10k ohms (max.) Preout (Subwoofer): 4V/10k ohms (max.)

### CHASSIS SIZE

Width	178 mm
Height	100 mm
Depth	68 mm

- Due to continuous product improvement, specifications and design are subject to change without notice.
- The LCD panel is manufactured using an extremely high precision manufacturing technology. Its effective pixel ratio is over 99.99%. This means that there is a possibility that 0.01% of the pixels could be either always ON or OFF

---

---

# Installation and Connections

Before installing or connecting the unit, please read the following and pages 5 to 8 of this manual thoroughly for proper use.

## WARNING

---

### KEEP SMALL OBJECTS SUCH AS SCREWS OUT OF THE REACH OF CHILDREN.

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

---

### MAKE THE CORRECT CONNECTIONS.

Failure to make the proper connections may result in fire or product damage.

---

### USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND.

(Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

---

### BEFORE WIRING, DISCONNECT THE CABLE FROM THE NEGATIVE BATTERY TERMINAL.

Failure to do so may result in electric shock or injury due to electrical shorts.

---

### DO NOT ALLOW CABLES TO BECOME ENTANGLED IN SURROUNDING OBJECTS.

Arrange wiring and cables in compliance with the manual to prevent obstructions when driving. Cables or wiring that obstruct or hang up on places such as the steering wheel, gear lever, brake pedals, etc. can be extremely hazardous.

---

### DO NOT SPLICE INTO ELECTRICAL CABLES.

Never cut away cable insulation to supply power to other equipment. Doing so will exceed the current carrying capacity of the wire and result in fire or electric shock.

---

### DO NOT DAMAGE PIPE OR WIRING WHEN DRILLING HOLES.

When drilling holes in the chassis for installation, take precautions so as not to contact, damage or obstruct pipes, fuel lines, tanks or electrical wiring. Failure to take such precautions may result in fire.

---

### DO NOT USE BOLTS OR NUTS IN THE BRAKE OR STEERING SYSTEMS TO MAKE GROUND CONNECTIONS.

Bolts or nuts used for the brake or steering systems (or any other safety-related system), or tanks should NEVER be used for installations or ground connections. Using such parts could disable control of the vehicle and cause fire etc.

---

### DO NOT INSTALL IN LOCATIONS WHICH MIGHT HINDER VEHICLE OPERATION, SUCH AS THE STEERING WHEEL OR GEARSHIFT.

Doing so may obstruct forward vision or hamper movement etc. and results in serious accident.

## CAUTION

---

### HAVE THE WIRING AND INSTALLATION DONE BY EXPERTS.

The wiring and installation of this unit requires special technical skill and experience. To ensure safety, always contact the dealer where you purchased this product to have the work done.

---

### USE SPECIFIED ACCESSORY PARTS AND INSTALL THEM SECURELY.

Be sure to use only the specified accessory parts. Use of other than designated parts may damage this unit internally or may not securely install the unit in place. This may cause parts to become loose resulting in hazards or product failure.

---

### ARRANGE THE WIRING SO IT IS NOT CRIMPED OR PINCHED BY A SHARP METAL EDGE.

Route the cables and wiring away from moving parts (like the seat rails) or sharp or pointed edges. This will prevent crimping and damage to the wiring. If wiring passes through a hole in metal, use a rubber grommet to prevent the wire's insulation from being cut by the metal edge of the hole.

---

### DO NOT INSTALL IN LOCATIONS WITH HIGH MOISTURE OR DUST.

Avoid installing the unit in locations with high incidence of moisture or dust. Moisture or dust that penetrates into this unit may result in product failure.

---

## Precautions

- Be sure to disconnect the cable from the (-) battery post before installing your unit. This will reduce any chance of damage to the unit in case of a short-circuit.
- Be sure to connect the color coded leads according to the diagram. Incorrect connections may cause the unit to malfunction or damage to the vehicle's electrical system.
- When making connections to the vehicle's electrical system, be aware of the factory installed components (e.g. on-board computer). Do not tap into these leads to provide power for this unit. When connecting the unit to the fuse box, make sure the fuse for the intended circuit of the unit has the appropriate amperage. When in doubt, consult your Alpine dealer.
- The unit uses female RCA-type jacks for connection to other units (e.g. amplifier) having RCA connectors. You may need an adaptor to connect other units. If so, please contact your authorized Alpine dealer for assistance.
- Be sure to connect the speaker (-) leads to the speaker (-) terminal. Never connect left and right channel speaker cables to each other or to the vehicle body.


## Accessory List

Main unit.....	1
Power cable.....	1
RCA cable.....	1
GPS antenna .....	1set
Microphone .....	1
USB extension cable .....	1
Screw.....	4
Countersunk screw .....	4
Quick Reference Guidance.....	1
Card note1.....	1
Card note2.....	1
Warranty card.....	1

## Installation

### CAUTION


- Do not block the unit's fan, thus preventing air circulation. If blocked, heat will accumulate inside the unit and may cause a fire.

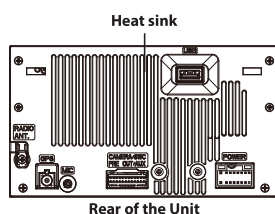

### Caution concerning the installation location

#### Angle of installation

Install at an angle between horizontal and 30°. Note that installing at an angle outside of this range will result in a loss of performance and possibly damage.

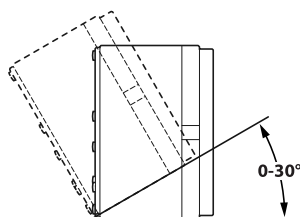


### Mounting the Microphone

For safe use, make sure of the following:


- Location is stable and firm.
- Does not interfere with safety equipment.
- Driver's view and operations are not obstructed.
- Microphone is located where the driver's voice can be easily picked up (for example, on the sun visor).

When you speak into the microphone, you should not have to change your driving posture. This may cause a distraction, taking your attention away from safely driving your vehicle. Carefully consider direction and distance while mounting the microphone. Confirm that the driver's voice can be easily picked up at the selected location.

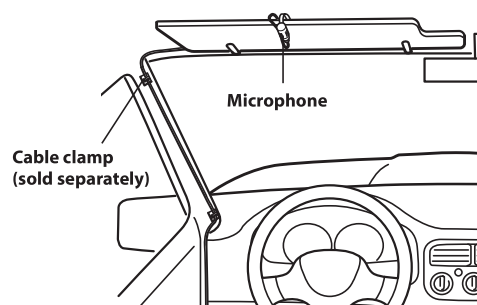

### Installation example using the Original Mounting Bracket

- Mount the original mounting bracket to the unit using the supplied screws.

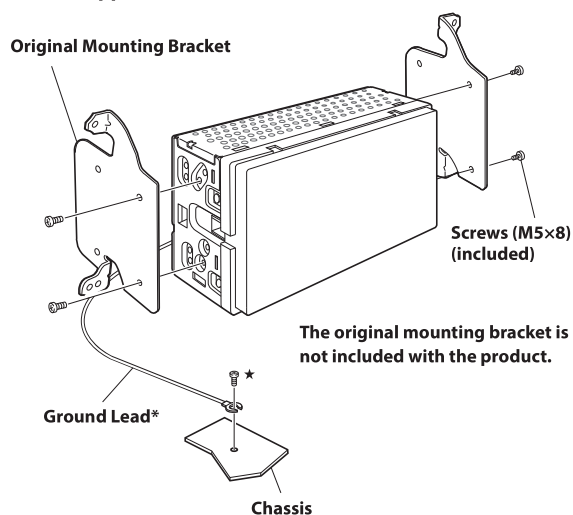


- Connect all other leads of the unit according to details described in the "Connections" (page 46).

- Mount the unit in a car.

- To securely connect the ground lead, use an already installed screw on a metal part of the vehicle (marked (★)) or a clean, bare metal spot on the vehicle's chassis.
- Fix the cables carefully. Do not damage them by mounting them into movable parts, such as the seat rail, or by locating them against sharp or pointed edges.

- Reattach the removed vehicle parts (panels, etc.) or other aftermarket dash kit back onto the vehicle.

# Connections

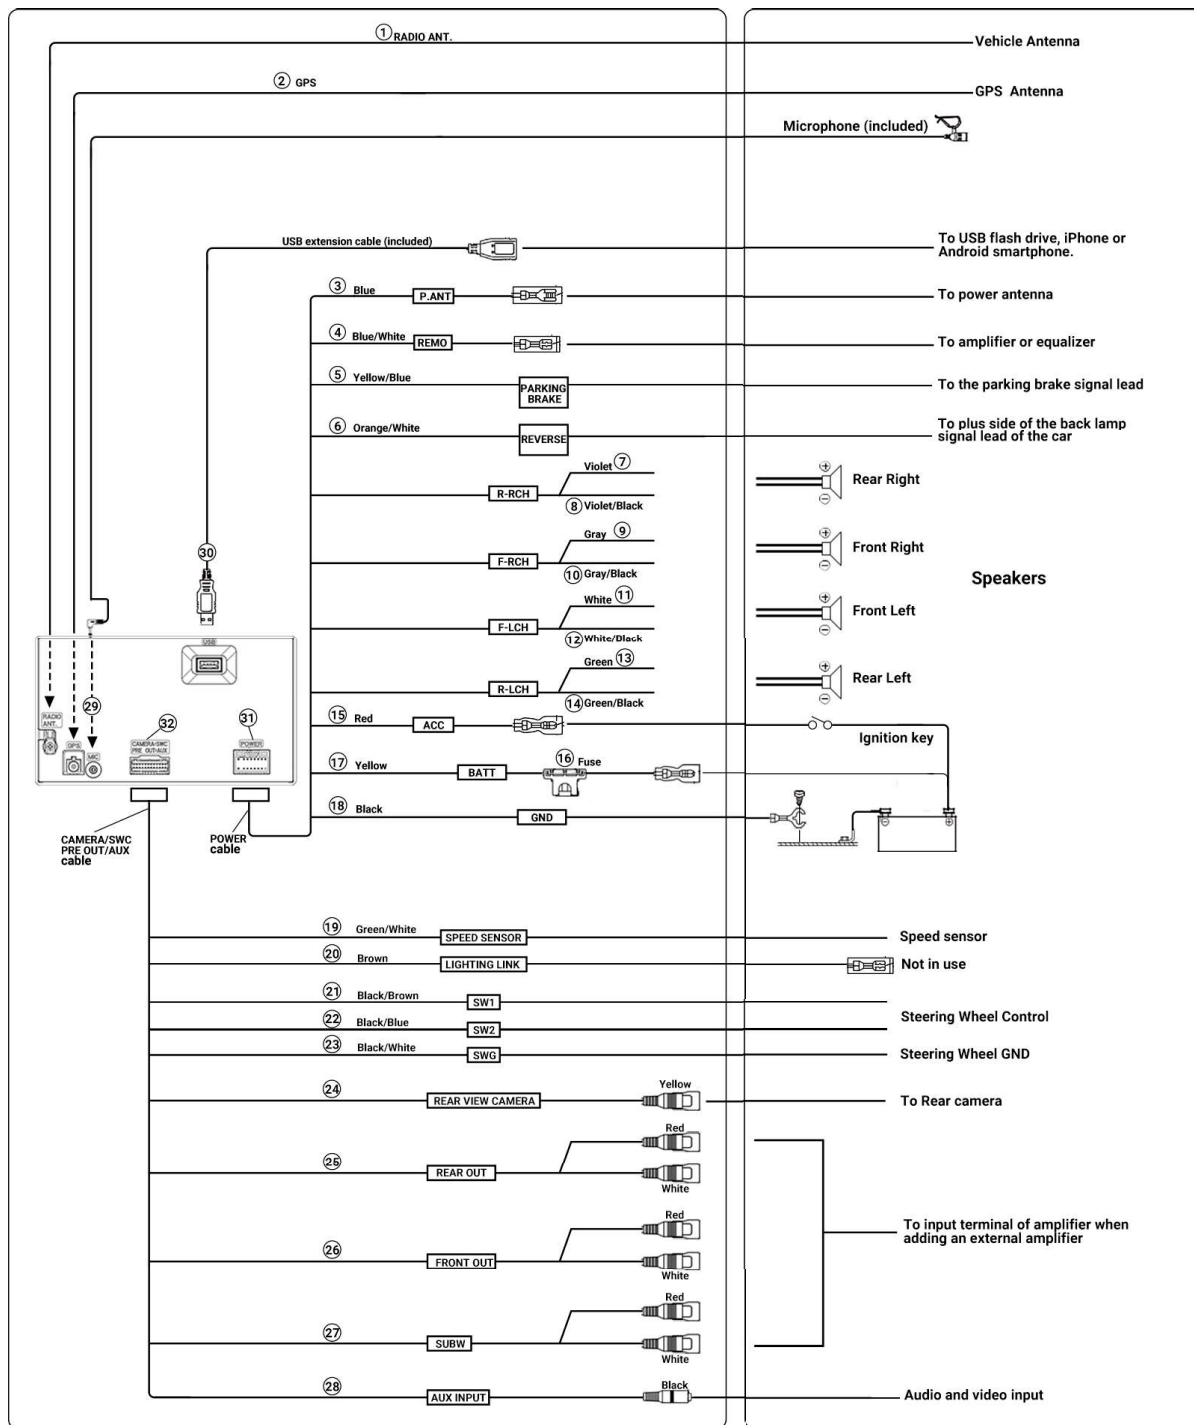


- ① **Radio Antenna Receptacle**
- ② **GPS Antenna Receptacle**
- ③ **Power Antenna Lead (Blue)**  
Connect this lead to the +B terminal of your power antenna, if applicable.
  - *This lead should be used only for controlling the vehicle's power antenna. Do not use this lead to turn on an amplifier or a signal processor, etc.*
- ④ **Remote Turn-On Lead (Blue/White)**  
Connect this lead to the remote turn-on lead of your amplifier or signal processor.
- ⑤ **Parking Brake Lead (Yellow/Blue)**  
Connect this lead to the power supply side of parking brake switch to transmit the parking brake status signals to the unit.
- ⑥ **Reverse Lead (Orange/White)**
- ⑦ **Right Rear (+) Speaker Output Lead (Violet)**
- ⑧ **Right Rear (-) Speaker Output Lead (Violet/Black)**
- ⑨ **Right Front (+) Speaker Output Lead (Gray)**
- ⑩ **Right Front (-) Speaker Output Lead (Gray/Black)**
- ⑪ **Left Front (+) Speaker Output Lead (White)**
- ⑫ **Left Front (-) Speaker Output Lead (White/Black)**
- ⑬ **Left Rear (+) Speaker Output Lead (Green)**
- ⑭ **Left Rear (-) Speaker Output Lead (Green/Black)**
- ⑮ **Switched Power Lead (Ignition) (Red)**  
Connect this lead to an open terminal on the vehicle's fuse box or another unused power source that provides (+) 12V only when the ignition is turned on or in the accessory position.
- ⑯ **Fuse Holder (15A)**
- ⑰ **Battery Lead (Yellow)**  
Connect this lead to the positive (+) post of the vehicle's battery.
- ⑱ **Ground Lead (Black)**  
Connect this lead to a good chassis ground on the vehicle. Make sure the connection is made to bare metal and is securely fastened using the sheet metal screw provided.
- ⑲ **SPEED SENSOR (Green/White)**
- ⑲ **LIGHTING LINK (Brown)**  
Not in use.
- ⑲ **SW1 (Black/Brown)**  
Steering Wheel Control
- ⑲ **SW2 (Black/Blue)**  
Steering Wheel Control
- ⑲ **SWG (Black/White)**  
Steering Wheel GND
- ⑲ **REAR CAMERA Input RCA Connector (Black)**  
Use when connecting a camera with RCA Output Connector.
- ⑲ **Rear Output RCA Connectors**  
Can be used as Rear Output RCA Connectors. RED is right and WHITE is left.
- ⑲ **Front Output RCA Connectors**  
Can be used as Front Output RCA Connectors. RED is right and WHITE is left.
- ⑲ **Subwoofer RCA Connectors**
- ⑲ **AUX INPUT (Black)**  
Audio and video input.
- ⑲ **MIC Input Connector**  
To microphone (included)
- ⑲ **USB Connector**  
To USB flash drive, iPhone or Android smartphone.
- ⑲ **Power Supply Connector**
- ⑲ **CAMERA/SWC PRE OUT/AUX**



## If an ACC power supply is not available

### Connection Diagram of SPST Switch (sold separately)

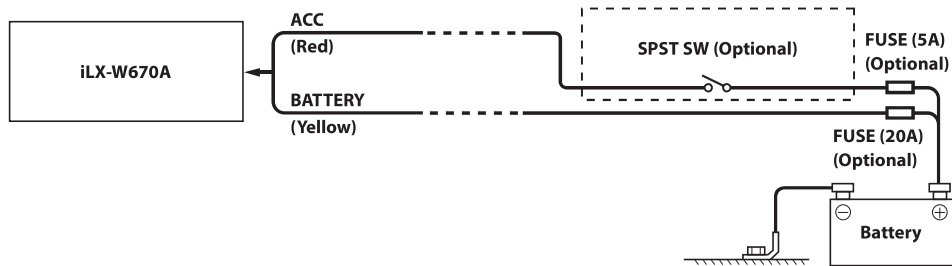

- If your vehicle has no ACC power supply, add an SPST (single-pole, single-throw) switch (sold separately) and fuse (sold separately).
- The diagram and the fuse amperage shown above are in the case when the unit is used individually.
- If the switched power (ignition) lead of the unit is connected directly to the positive (+) post of the vehicle's battery, the unit draws some current (several hundred milliamperes) even when its switch is placed in the OFF position, and the battery may be discharged.

#### IMPORTANT

Please record the serial number of your unit in the space provided below and keep it as a permanent record. The serial number plate is located on the bottom of the unit.

SERIAL NUMBER: \_\_\_\_\_

INSTALLATION DATE: \_\_\_\_\_

INSTALLATION TECHNICIAN: \_\_\_\_\_

PLACE OF PURCHASE: \_\_\_\_\_


#### To prevent external noise from entering the audio system.

- Locate the unit and route the leads at least 10 cm away from the car harness.
- Keep the battery power leads as far away from other leads as possible.
- Connect the ground lead securely to a bare metal spot (remove any paint, dirt or grease if necessary) of the car chassis.
- If you add an optional noise suppressor, connect it as far away from the unit as possible. Your Alpine dealer carries various noise suppressors, contact them for further information.
- Your Alpine dealer knows best about noise prevention measures so consult your dealer for further information.

## System Example


### Connection of an iPhone

#### ■ When connecting to an iPhone with a Lightning connector

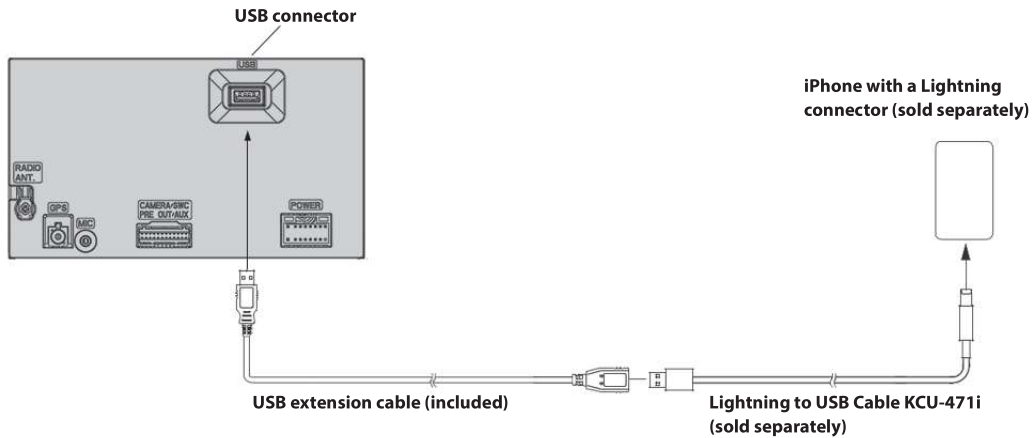


- Do not leave an iPhone in a vehicle for a long time. Heat and humidity may damage the iPhone, and you may not be able to play it again.

### Connection of a USB Flash Drive

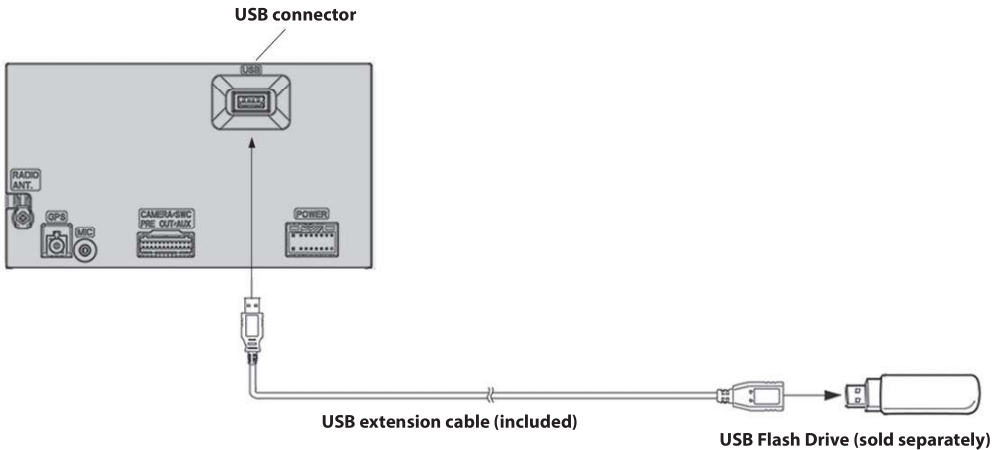


- Do not leave a flash drive in a vehicle for a long time. Heat and humidity may damage the flash drive.

**Connection of a camera**

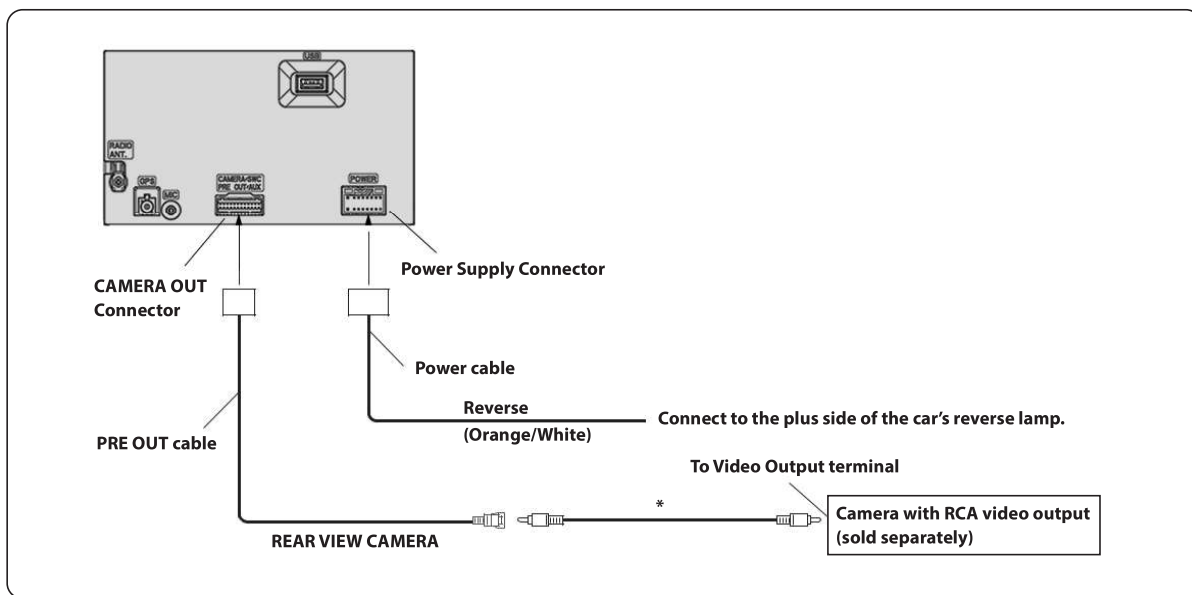

\* RCA Extension Cable (sold separately)

**Connection of Lighting Link System**

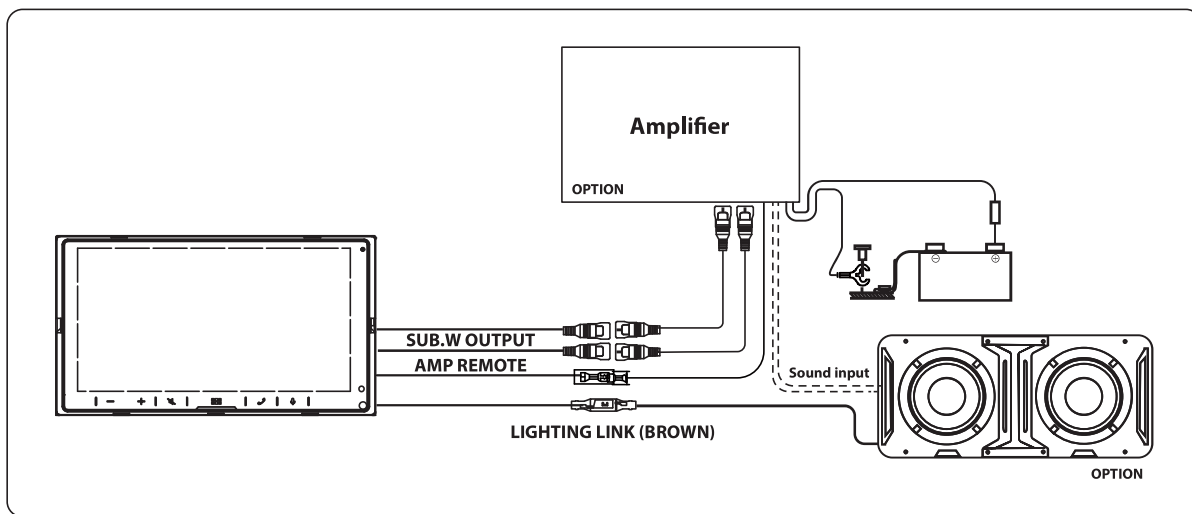

- For complete installation and Sub . Enclosure features, please see Prisma Link enclosure manual.
- When connecting the Lighting Link cable, set the LED Brightness/LED Lighting Speed setting of this unit to 0 (page 24).





## LIMITED WARRANTY

ALPINE ELECTRONICS OF AMERICA, INC. ("Alpine"), is dedicated to quality craftsmanship and is pleased to offer this Warranty. We suggest that you read it thoroughly. Should you have any questions, please contact your Dealer or contact Alpine at one of the telephone numbers listed below.

### ● PRODUCTS COVERED:

This Warranty covers Car Audio Products and Related Accessories ("the product"). Products purchased in the Canada are covered only in the Canada. Products purchased in the U.S.A. are covered only in the U.S.A.

### ● LENGTH OF WARRANTY:

This Warranty is in effect for one year from the date of the first consumer purchase.

### ● WHO IS COVERED:

This Warranty only covers the original purchaser of the product, who must reside in the United States, Puerto Rico, Mexico, Brazil, Argentina or Canada.

### ● WHAT IS COVERED:

This Warranty covers defects in materials or workmanship (parts and labor) in the product.

### ● WHAT IS NOT COVERED:

This Warranty does not cover the following:

Damage occurring during shipment of the product to Alpine for repair (claims must be presented to the carrier).

Damage caused by accident or abuse, including burned voice coils caused by over-driving the speaker (amplifier level is turned up and driven into distortion or clipping). Speaker mechanical failure (e.g. punctures, tears or rips). Cracked or damaged LCD panels. Dropped or damaged hard drives.

Damage caused by negligence, misuse, improper operation or failure to follow instructions contained in the Owner's manual.

Damage caused by act of God, including without limitation, earthquake, fire, flood, storms or other acts of nature.

Any cost or expense related to the removal or reinstallation of the product.

Service performed by an unauthorized person, company or association.

Any product which has the serial number defaced, altered or removed.

Any product which has been adjusted, altered or modified without Alpine's consent.

Any product not distributed by Alpine within the United States, Puerto Rico or Canada.

Any product not purchased from an Authorized Alpine Dealer.

### ● HOW TO OBTAIN WARRANTY SERVICE:

- ① You are responsible for delivery of the product to an Authorized Alpine Service Center or Alpine for repair and for payment of any initial shipping charges. Alpine will, at its option, repair or replace the product with a new or reconditioned product without charge. If the repairs are covered by the warranty, and if the product was shipped to an Authorized Alpine Service Center or Alpine, Alpine will pay the return shipping charges.

- ② You should provide a detailed description of the problem(s) for which service is required.

- ③ You must supply proof of your purchase of the product.

- ④ You must package the product securely to avoid damage during shipment. To prevent lost packages it is recommended to use a carrier that provides a tracking service.

### ● HOW WE LIMIT IMPLIED WARRANTIES:

ANY IMPLIED WARRANTIES INCLUDING FITNESS FOR USE AND MERCHANTABILITY ARE LIMITED IN DURATION TO THE PERIOD OF THE EXPRESS WARRANTY SET FORTH ABOVE AND NO PERSON IS AUTHORIZED TO ASSUME FOR ALPINE ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THE PRODUCT.

### ● HOW WE EXCLUDE CERTAIN DAMAGES:

ALPINE EXPRESSLY DISCLAIMS LIABILITY FOR INCIDENTAL AND CONSEQUENTIAL DAMAGES CAUSED BY THE PRODUCT. THE TERM "INCIDENTAL DAMAGES" REFERS TO EXPENSES OF TRANSPORTING THE PRODUCT TO THE ALPINE SERVICE CENTER, LOSS OF THE ORIGINAL PURCHASER'S TIME, LOSS OF THE USE OF THE PRODUCT, BUS FARES, CAR RENTALS OR OTHERS COSTS RELATING TO THE CARE AND CUSTODY OF THE PRODUCT. THE TERM "CONSEQUENTIAL DAMAGES" REFERS TO THE COST OF REPAIRING OR REPLACING OTHER PROPERTY WHICH IS DAMAGED WHEN THIS PRODUCT DOES NOT WORK PROPERLY. THE REMEDIES PROVIDED UNDER THIS WARRANTY ARE EXCLUSIVE AND IN LIEU OF ALL OTHERS.

### ● HOW STATE/PROVINCIAL LAW RELATES TO THE WARRANTY:

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state and province to province. In addition, some states/provinces do not allow limitations on how long an implied warranty lasts, and some do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, limitations as to these matters contained herein may not apply to you.

### ● IN CANADA ONLY:

This Warranty is not valid unless your Alpine car audio product has been installed in your vehicle by an Authorized Installation Center, and this warranty stamped upon installation by the installation center.

### ● HOW TO CONTACT CUSTOMER SERVICE:

Should the product require service, please call the following number for your nearest Authorized Alpine Service Center.

CAR AUDIO	1-800-ALPINE-1 (1-800-257-4631)
NAVIGATION	1-888-NAV-HELP (1-888-628-4357)

Or visit our website at; <http://www.alpine-usa.com>

ALPINE ELECTRONICS OF AMERICA, INC., 1500 Atlantic Blvd, Auburn Hills, Michigan 48326, U.S.A.

Do not send products to this address.

Call the toll free telephone number or visit the website to locate a service center.

## **About the Rules of Bluetooth Electromagnetic Radiation Regulation**

### **USA/Canada**

#### **FCC/IC CAUTION**

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- This device may not cause interference; and
- This device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- l'appareil ne doit pas produire de brouillage;
- l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles des radioélectriques (RF) de la FCC lignes directrices d'exposition et d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement émet une énergie RF très faible qui est considérée conforme sans évaluation de l'exposition maximale autorisée (MPE). Cependant, il est souhaitable qu'il devrait être installé et utilisé en gardant une distance de 20 cm ou plus entre le radiateur et le corps humain.

Don't forget to take a moment to protect your purchase by registering your product now at the following address: [www.alpine-usa.com/registration](http://www.alpine-usa.com/registration).

N'oubliez pas de consacrer un moment à la protection de votre achat en enregistrant votre produit dès maintenant à l'adresse suivante : [www.alpine-usa.com/registration](http://www.alpine-usa.com/registration).

Recuerde que con solo unos pocos pasos podrá proteger su producto, registrándolo a través de la siguiente dirección: [www.alpine-usa.com/registration](http://www.alpine-usa.com/registration).

## Open source licenses

This software includes open source software codes licensed under GNU General Public

GNU GENERAL PUBLIC LICENSE  
Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.  
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things. To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps:

- (1) copyright the software.
- (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

Detailed license notice, full license texts and machine readable copy of the corresponding source code are readily available on our OSS website (\*)

\* <http://www.alpine.com/e/oss/download>

### Disclaimer

TO THE EXTENT PERMITTED BY APPLICABLE LAW, AND AS PROVIDED IN THE GPL AND LGPL, PIONEER AND ITS LICENSORS PROVIDE AND YOU ACCEPT THE FIRMWARE "AS IS" WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. YOU ACCEPT THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE FIRMWARE.

UNLESS REQUIRED BY APPLICABLE LAW, AND AS PROVIDED IN THE GPL AND LGPL, IN NO EVENT WILL PIONEER OR ITS LICENSORS BE LIABLE TO YOU OR ANY THIRD PARTIES FOR DAMAGES OF ANY KIND ARISING OUT OF YOUR USE OR INABILITY TO USE THE FIRMWARE, INCLUDING WITHOUT LIMITATION ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, CONSEQUENTIAL, PUNITIVE OR EXEMPLARY DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.